



User Guide

Beckhoff CTNet I/O

Remote I/O for CTNet

Part Number: 0485-0019-04
Issue: 4

Original Instructions

For the purposes of compliance with the EU Machinery Directive 2006/42/EC, the English version of this manual is the Original Instructions. Manuals in other languages are Translations of the Original Instructions.

Documentation

Manuals are available to download from the following locations: <http://www.drive-setup.com/ctdownloads>

The information contained in this manual is believed to be correct at the time of printing and does not form part of any contract. The manufacturer reserves the right to change the specification of the product and its performance, and the contents of the manual, without notice.

Warranty and Liability

In no event and under no circumstances shall the manufacturer be liable for damages and failures due to misuse, abuse, improper installation, or abnormal conditions of temperature, dust, or corrosion, or failures due to operation outside the published ratings. The manufacturer is not liable for consequential and incidental damages. Contact the supplier of the drive for full details of the warranty terms.

Environmental policy

Control Techniques Ltd operates an Environmental Management System (EMS) that conforms to the International Standard ISO 14001.

Further information on our Environmental Policy can be found at: <http://www.drive-setup.com/environment>

Restriction of Hazardous Substances (RoHS)

The products covered by this manual comply with European and International regulations on the Restriction of Hazardous Substances including EU directive 2011/65/EU and the Chinese Administrative Measures for Restriction of Hazardous Substances in Electrical and Electronic Products.

Disposal and Recycling (WEEE)



When electronic products reach the end of their useful life, they must not be disposed of along with domestic waste but should be recycled by a specialist recycler of electronic equipment. Control Techniques products are designed to be easily dismantled into their major component parts for efficient recycling. The majority of materials used in the product are suitable for recycling.

Product packaging is of good quality and can be re-used. Large products are packed in wooden crates. Smaller products are packaged in strong cardboard cartons which have a high recycled fibre content. Cartons can be re-used and recycled. Polythene, used in protective film and bags for wrapping the product, can be recycled. When preparing to recycle or dispose of any product or packaging, please observe local legislation and best practice.

REACH legislation

EC Regulation 1907/2006 on the Registration, Evaluation, Authorisation and restriction of Chemicals (REACH) requires the supplier of an article to inform the recipient if it contains more than a specified proportion of any substance which is considered by the European Chemicals Agency (ECHA) to be a Substance of Very High Concern (SVHC) and is therefore listed by them as a candidate for compulsory authorisation.

Further information on our compliance with REACH can be found at: <http://www.drive-setup.com/reach>

Registered Office

Nidec Control Techniques Ltd
The Gro
Newtown
Powys
SY16 3BE
UK

Registered in England and Wales. Company Reg. No. 01236886.

Copyright

The contents of this publication are believed to be correct at the time of printing. In the interests of a commitment to a policy of continuous development and improvement, the manufacturer reserves the right to change the specification of the product or its performance, or the contents of the guide, without notice.

All rights reserved. No parts of this guide may be reproduced or transmitted in any form or by any means, electrical or mechanical including photocopying, recording or by an information storage or retrieval system, without permission in writing from the publisher.

Copyright © March 2018 Nidec Control Techniques Ltd

Contents

1	Safety information	6
1.1	Warnings, Cautions and Notes	6
1.2	Important safety information. Hazards. Competence of designers and installers	6
1.3	Responsibility	6
1.4	Compliance with regulations	6
1.5	Electrical hazards	7
1.6	Stored electrical charge	7
1.7	Mechanical hazards	7
1.8	Access to equipment	7
1.9	Environmental limits	8
1.10	Hazardous environments	8
1.11	Motor	8
1.12	Mechanical brake control	8
1.13	Adjusting parameters	8
1.14	Electromagnetic compatibility (EMC)	8
2	Introduction	9
2.1	Remote I/O for CTNet	9
2.2	BK7200 bus coupler	9
2.3	BK7200 bus coupler features	10
2.4	Hardware description	10
2.5	BK7200 product specifications	11
3	Electrical Installation	12
3.1	BK7200 main power supply requirements	12
3.2	Power supply to the power connections	12
3.3	CTNet connection	13
3.4	Configuration interface	13
3.5	K-bus contacts	13
3.6	Supply isolation	13
4	CTNet Installation	14
4.1	BK7200 bus coupler	14
4.2	CTNet cable	14
4.3	Cable specification	15
4.4	Cable screen	15
4.5	Network termination	15
4.6	Network limitations	16
5	Getting Started	17
5.1	Network node address	17
5.2	Network data rate	18
5.3	DIP switch example	18
5.4	Synchronization message	19
5.5	Network initialization	19
5.6	Network loss	19
5.7	Network interruptions	19
5.8	Beckhoff coupler programming cable	19

6	Terminal Configuration	20
6.1	BK7200 bus coupler	20
6.2	Digital input terminals	21
6.3	Digital output terminals	23
6.4	Analog input terminals	25
6.5	Analog output terminals	27
6.6	Special function input terminals	28
6.7	Special function output terminals	28
6.8	Large terminals	28
6.9	Example configuration 1	29
6.10	Example configuration 2	30
7	Cyclic Data	32
7.1	Fast and slow cyclic data channels	32
7.2	Cyclic/Non-cyclic data - time allocations	32
7.3	Overloading network nodes	33
7.4	Asynchronous sampling	34
7.5	Setting up the BK7200 for cyclic communications	35
8	Non-cyclic Data	41
9	Diagnostics	42
9.1	Beckhoff BK7200 bus coupler firmware version	42
9.2	Diagnostic LEDs	43
9.3	Error codes and their meanings	43
9.4	Location of error	45
9.5	Cannot establish CTNet connection	45
10	KS2000 Configuration Tool	46
10.1	KS2000 introduction	46
10.2	KS2000 features	46
10.3	Purchasing KS2000	48
11	Menu 0	49
11.1	Menu 0 parameters	49
11.2	Watchdog	52
11.3	Unsupported terminal	53
11.4	2-byte PLC interface	54
12	Glossary Of Terms	55

1 Safety information

1.1 Warnings, Cautions and Notes



A Warning contains information which is essential for avoiding a safety hazard.



A Caution contains information which is necessary for avoiding a risk of damage to the product or other equipment.

NOTE A Note contains information, which helps to ensure correct operation of the product.

1.2 Important safety information. Hazards. Competence of designers and installers

This guide applies to products which control electric motors either directly (drives) or indirectly (controllers, option modules and other auxiliary equipment and accessories). In all cases the hazards associated with powerful electrical drives are present, and all safety information relating to drives and associated equipment must be observed.

Specific warnings are given at the relevant places in this guide.

Drives and controllers are intended as components for professional incorporation into complete systems. If installed incorrectly they may present a safety hazard. The drive uses high voltages and currents, carries a high level of stored electrical energy, and is used to control equipment which can cause injury. Close attention is required to the electrical installation and the system design to avoid hazards either in normal operation or in the event of equipment malfunction. System design, installation, commissioning/ start-up and maintenance must be carried out by personnel who have the necessary training and competence. They must read this safety information and this guide carefully.

1.3 Responsibility

It is the responsibility of the installer to ensure that the equipment is installed correctly with regard to all instructions given in this guide. They must give due consideration to the safety of the complete system, so as to avoid the risk of injury both in normal operation and in the event of a fault or of reasonably foreseeable misuse.

The manufacturer accepts no liability for any consequences resulting from inappropriate, negligent or incorrect installation of the equipment.

1.4 Compliance with regulations

The installer is responsible for complying with all relevant regulations, such as national wiring regulations, accident prevention regulations and electromagnetic compatibility (EMC) regulations. Particular attention must be given to the cross-sectional areas of conductors, the selection of fuses or other protection, and protective ground (earth) connections.

This guide contains instructions for achieving compliance with specific EMC standards.

All machinery to be supplied within the European Union in which this product is used must comply with the following directives:

2006/42/EC Safety of machinery.

2014/30/EU: Electromagnetic Compatibility.

1.5 Electrical hazards

The voltages used in the drive can cause severe electrical shock and/or burns, and could be lethal. Extreme care is necessary at all times when working with or adjacent to the drive. Hazardous voltage may be present in any of the following locations:

- AC and DC supply cables and connections
- Output cables and connections
- Many internal parts of the drive, and external option units

Unless otherwise indicated, control terminals are single insulated and must not be touched.

The supply must be disconnected by an approved electrical isolation device before gaining access to the electrical connections.

The STOP and Safe Torque Off functions of the drive do not isolate dangerous voltages from the output of the drive or from any external option unit.

The drive must be installed in accordance with the instructions given in this guide. Failure to observe the instructions could result in a fire hazard.

1.6 Stored electrical charge

The drive contains capacitors that remain charged to a potentially lethal voltage after the AC supply has been disconnected. If the drive has been energized, the AC supply must be isolated at least ten minutes before work may continue.

1.7 Mechanical hazards

Careful consideration must be given to the functions of the drive or controller which might result in a hazard, either through their intended behaviour or through incorrect operation due to a fault. In any application where a malfunction of the drive or its control system could lead to or allow damage, loss or injury, a risk analysis must be carried out, and where necessary, further measures taken to reduce the risk - for example, an over-speed protection device in case of failure of the speed control, or a fail-safe mechanical brake in case of loss of motor braking.

With the sole exception of the Safe Torque Off function, none of the drive functions must be used to ensure safety of personnel, i.e. they must not be used for safety-related functions.

The Safe Torque Off function may be used in a safety-related application. The system designer is responsible for ensuring that the complete system is safe and designed correctly according to the relevant safety standards.

The design of safety-related control systems must only be done by personnel with the required training and experience. The Safe Torque Off function will only ensure the safety of a machine if it is correctly incorporated into a complete safety system. The system must be subject to a risk assessment to confirm that the residual risk of an unsafe event is at an acceptable level for the application.

1.8 Access to equipment

Access must be restricted to authorized personnel only. Safety regulations which apply at the place of use must be complied with.

1.9 Environmental limits

Instructions in this guide regarding transport, storage, installation and use of the equipment must be complied with, including the specified environmental limits. This includes temperature, humidity, contamination, shock and vibration. Drives must not be subjected to excessive physical force.

1.10 Hazardous environments

The equipment must not be installed in a hazardous environment (i.e. a potentially explosive environment).

1.11 Motor

The safety of the motor under variable speed conditions must be ensured.

To avoid the risk of physical injury, do not exceed the maximum specified speed of the motor.

Low speeds may cause the motor to overheat because the cooling fan becomes less effective, causing a fire hazard. The motor should be installed with a protection thermistor. If necessary, an electric forced vent fan should be used.

The values of the motor parameters set in the drive affect the protection of the motor. The default values in the drive must not be relied upon. It is essential that the correct value is entered in the Motor Rated Current parameter.

1.12 Mechanical brake control

Any brake control functions are provided to allow well co-ordinated operation of an external brake with the drive. While both hardware and software are designed to high standards of quality and robustness, they are not intended for use as safety functions, i.e. where a fault or failure would result in a risk of injury. In any application where the incorrect operation of the brake release mechanism could result in injury, independent protection devices of proven integrity must also be incorporated.

1.13 Adjusting parameters

Some parameters have a profound effect on the operation of the drive. They must not be altered without careful consideration of the impact on the controlled system.

Measures must be taken to prevent unwanted changes due to error or tampering.

1.14 Electromagnetic compatibility (EMC)

Installation instructions for a range of EMC environments are provided in the relevant Power Installation Guide. If the installation is poorly designed or other equipment does not comply with suitable standards for EMC, the product might cause or suffer from disturbance due to electromagnetic interaction with other equipment. It is the responsibility of the installer to ensure that the equipment or system into which the product is incorporated complies with the relevant EMC legislation in the place of use.

2 Introduction

NOTE


This manual was created in conjunction with BK7200 firmware version 01.04.00, this version contains many more features than any previous versions and is built for use on CTNet Revision D BK7200 devices only. For the use of CTNet Revision A/B BK7200 devices please refer to the Beckhoff CTNet I/O User Guide, Issue 1.

2.1 Remote I/O for CTNet

The BK7200 provides an interface that allows the Beckhoff modular I/O system to be connected to CTNet networks. The interface is called a “bus coupler” and allows combinations of input and output terminals to be connected to it. It mounts directly onto standard DIN railing.

The BK7200 CTNet Bus Coupler module is the interface between CTNet and the Beckhoff serial K-bus and acts as a buffer for information transfer between the two bus systems. A range of digital and analog I/O terminals are supported by the CTNet Bus Coupler (see Chapter 6 *Terminal Configuration* on page 20 for more information).

2.2 BK7200 bus coupler

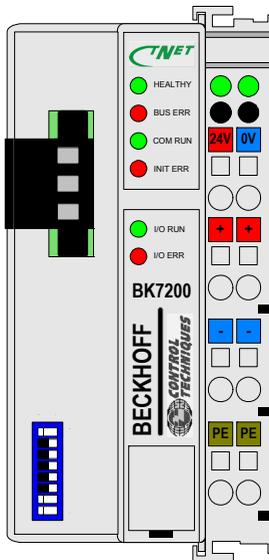

The most important piece of hardware required to create an I/O point on CTNet is the BK7200 CTNet bus coupler. This module connects directly to the CTNet network and appears on the network as another node. The data rate is selectable from 5.0 Mb/s down to 625 Kbits/sec and is configured (along with the node address) using the DIP switches. The BK7200 supports both fast and slow cyclic data and non-cyclic data commands. Although the BK7200 can respond to non-cyclic read and write commands issued by other nodes on the network, it cannot initiate non-cyclic commands (as it does not support DPL). SyPT Lite or SyPT Pro is required to configure cyclic data links within the BK7200 module.

Terminals are addressed using the same menu and parameter structure (#MM.PP) as Control Techniques drives. Each terminal is assigned to a menu according to the type of terminal it is, with the parameter number determined by the physical position of the terminal with respect to other similar terminals. This allows additional terminals to be connected at a later date without affecting the existing terminal configuration.

Digital inputs and outputs are addressed in blocks of 16 bits. This provides an efficient method of transferring digital input and output information around the system without taking up large amounts of the available network bandwidth.


2.3 BK7200 bus coupler features

- Up to 64 bus terminals
- Decentralised I/O
- Power input terminals for separately powered groups

2.4 Hardware description

Figure 2.1 shows an example BK7200 bus coupler configuration and its respective hardware features:

Figure 2-1 The principle of the bus terminal

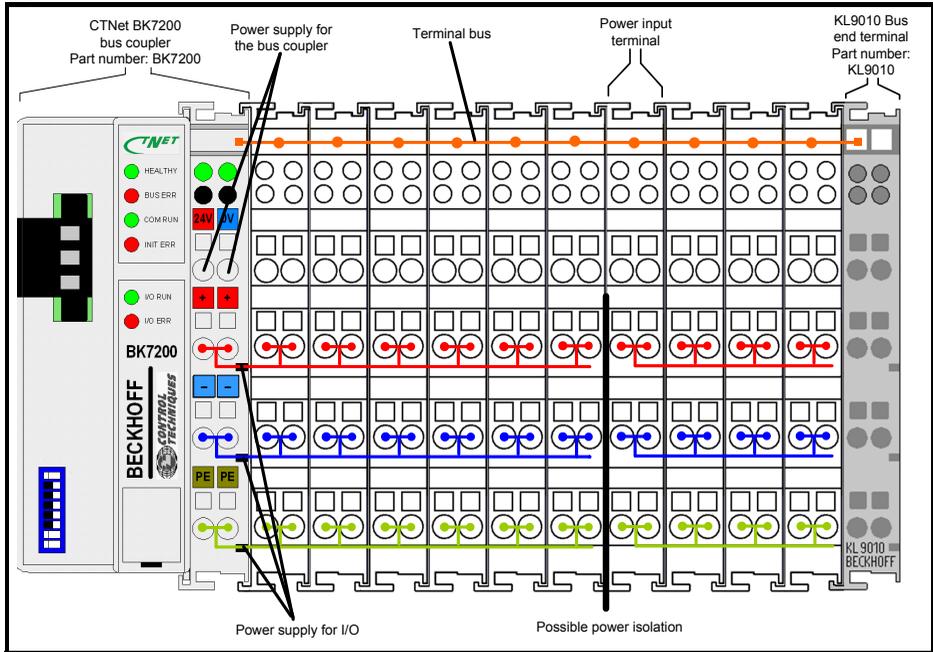

- **CTNet bus coupler BK7200**
This is the Beckhoff bus coupler which allows you to connect from the Beckhoff I/O terminals onto a CTNet network.
- **Power supply for the bus coupler**
These two contacts provide the +24V and 0V power supply contacts which provide power to the BK7200 bus coupler.
- **Terminal bus**
This is essentially what connects the terminals together to form a means of data transmission from terminal to terminal (internal and not visible).
- **Power input terminal**
Some analog input terminals provide the option of inserting an external power supply (this is useful when some terminals on the K-bus require either a higher or lower amount of power than is currently provided along the power contacts).


- *Bus end terminal*
The last terminal of the terminal bus must be a bus end terminal to terminate the data flow, an example bus end terminal is a KL9010.
- *Power supply for I/O*
These 3 contacts are the '+', '-' and the 'Potential Earth' and provide the power and earthing to the terminals connected to the bus coupler.
- *Possible power isolation*
On the left-hand side of most of the Beckhoff I/O terminals are two metal contacts. These contacts interlock with the preceding terminals power contacts which provides the terminal with power. Some terminals do not have these 2 contacts, these terminals allow the option of providing an additional power supply to them.

2.5 BK7200 product specifications

Number of bus terminals:	64
Digital peripheral signals:	Max 256 inputs/outputs
Analog peripheral signals:	Max 100 inputs/outputs
Special peripheral signals:	Max 100 inputs/outputs
Baud Rate:	625k, 1.25 MBit/s, 2.5 MBit/s, 5 MBit/s
Node range:	1 - 64
Bus connection:	1 x 3-pin screw terminal
Voltage supply:	24V DC
Weight:	Approx 100g


3 Electrical Installation

3.1 BK7200 main power supply requirements

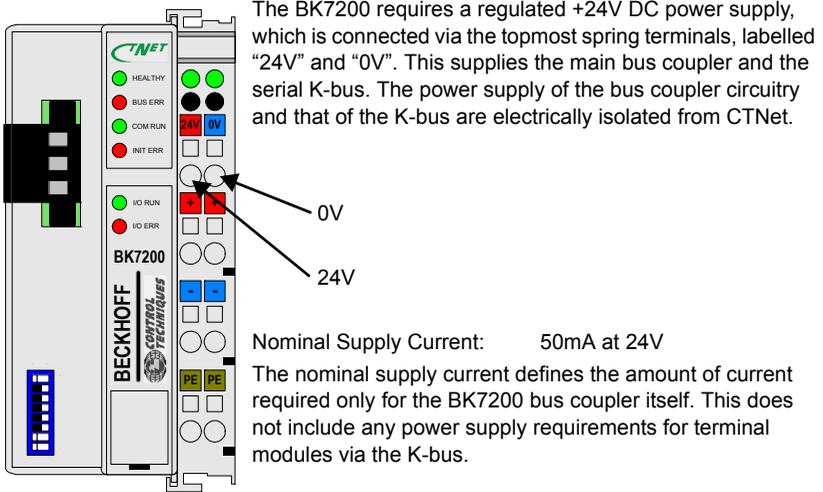

The current consumption from the K-bus is specified in the Beckhoff data sheets for each terminal module. Once the required configuration of terminals is known, the total current requirements for the bus coupler and K-bus can be calculated.

3.2 Power supply to the power connections

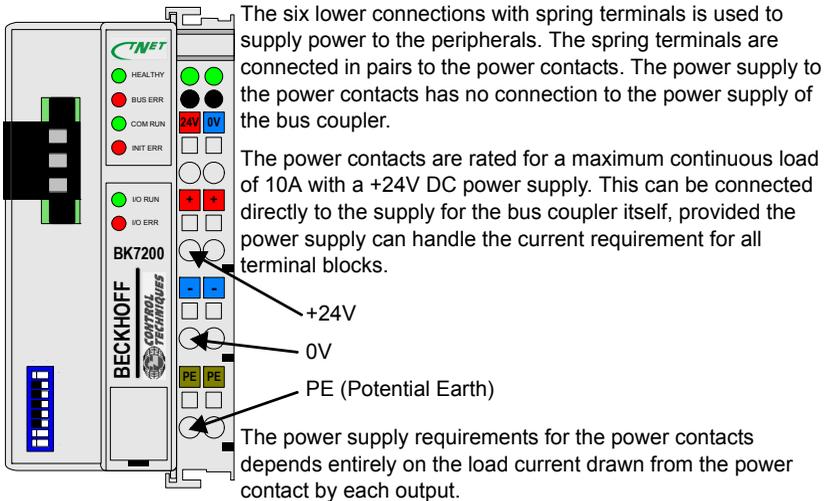

NOTE It is recommended that two separate supplies are used to prevent excessive I/O noise reaching the bus coupler power supply terminals.

3.3 CTNet connection

On the left hand side of the BK7200 bus coupler there is a flat recessed area from which you can plug in a 3-way CTNet connector, this is used to connect the device to a CTNet network (see section 2.1 *Remote I/O for CTNet* on page 9).

3.4 Configuration interface

On the lower left hand side of the BK7200s front face there is a 4-way connector slot underneath a rectangular flap. This is an RS232 interface which allows for the connection of the coupler directly to a PC, this can be used to update the firmware, configure the terminal with KS2000, etc. You could also access the functionality of the configuration interface via the fieldbus by means of the 2-byte PLC interface communications function.

3.5 K-bus contacts

All connections between the bus coupler and the bus terminals are made via gold contacts located on the right hand side of the bus coupler. When the Beckhoff terminals are slotted into each other, these gold contacts create a connection to the connected bus terminals. The K-bus is the component which is responsible for the power supply to the electronic components in the bus terminals and also the data exchanges occurring between the bus terminals, part of this exchange occurs within a ring structure of the K-bus. If a terminal is disconnected from the K-bus the circuit will be broken and no data can be exchanged.


3.6 Supply isolation

The bus coupler operates with three internal independent supplies. The input power supply provides power to the electrically isolated K-bus control circuits in the bus coupler and also the K-bus itself. The power supply is also used to generate the operating voltages for CTNet. All bus terminals are electrically isolated from the K-bus, so that the K-bus is fully isolated electrically.

4 CTNet Installation

4.1 BK7200 bus coupler

Figure 4-1 Beckhoff BK7200 bus coupler

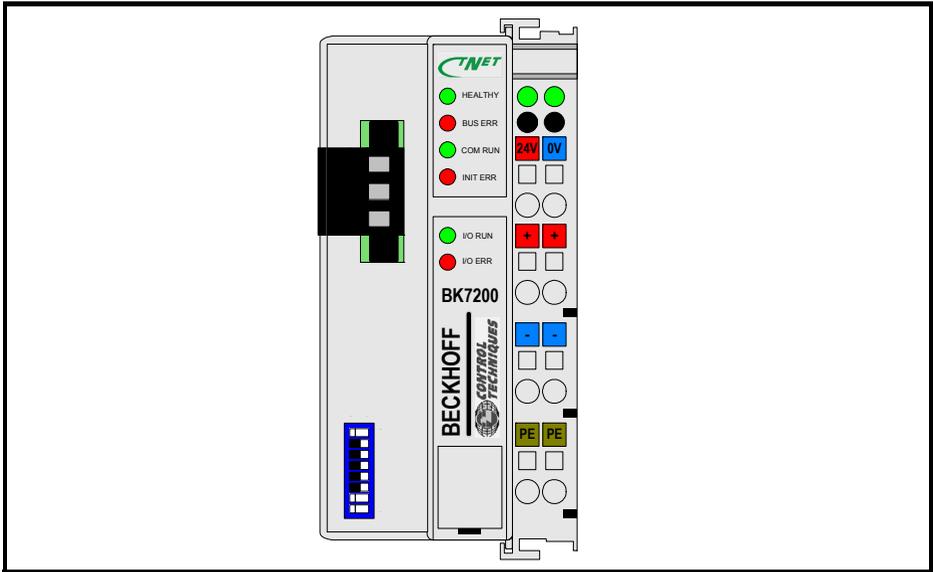

The BK7200 CTNet coupler (as shown in Figure 4-1) has a single CTNet connector, with the pin out connections as shown in Figure 4-1 and should be connected as shown in Figure 4-3 *CTNet network connections* on page 15.

4.2 CTNet cable

Table 4-1 CTNet cable pinouts (Revision D)

Function	CTNet pins	Description
A	1	Positive data line
Shield	2	Cable screen
B	3	Negative data line

Figure 4-2 CTNet cable pinouts


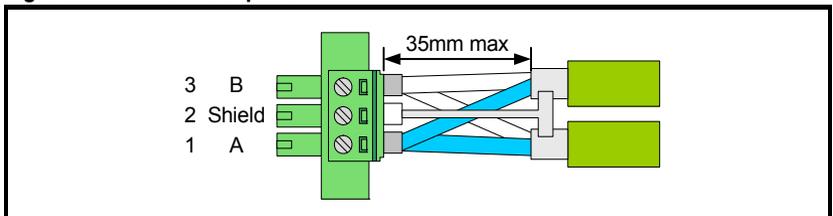


Figure 4-3 CTNet network connections

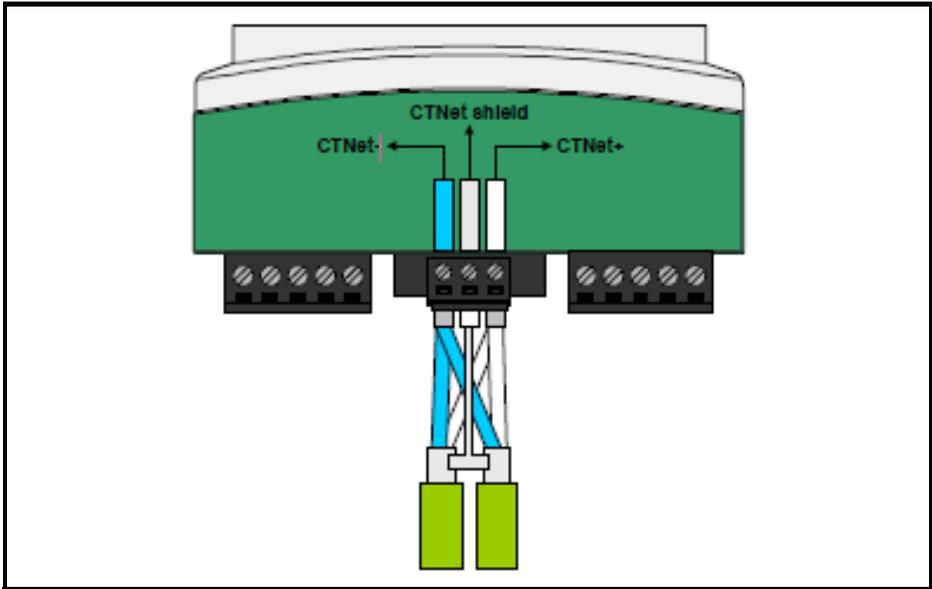

4.3 Cable specification

For maximum noise immunity, special CTNet cable must be used.

Table 4-2 CTNet cable part numbers

Part number	Description
4500-0098	100 m CTNet cable
4500-0099	200 m CTNet cable

Table 4-2 shows the part numbers for the relevant CTNet cable which is available from the supplier of the drive, it is strongly recommended that this cable is used in all CTNet installations.

NOTE Support will not be provided when non-approved CTNet cable is used.

4.4 Cable screen

The screen of the cable at every node on the network **MUST** be connected to the screen terminal (pin 2) on the CTNet terminal block (see Figure 4-3). When the screen is stripped back to connect the twisted pair to the CTNet terminals, keep the exposed section of the cable as short as possible.

4.5 Network termination

The network **MUST** be fitted with terminating resistors at the end of each segment. If resistors are not fitted, the network may appear to work OK, but the noise immunity of the network will be drastically reduced. The terminating resistor value should match the nominal characteristic impedance value for the cable; in the case of the customized CTNet cable, the terminating resistors used should be $82 \Omega \pm 1 \% 0.25 \text{ W}$.

4.6 Network limitations

The BK7200 CTNet bus coupler is capable of driving a maximum of 20 nodes over a maximum network cable length of 44 m at 5.0 Mbits/sec. If the network data rate is reduced to 2.5 Mbits/sec, the maximum network length is increased to 100 m, but the limit of 20 nodes remains the same.

Table 4-3 CTNet segment specifications

Data rate (Mbit/s)	Total cable length (m)			
	5 nodes	10 nodes	15 nodes	20 nodes
5.0	140	100	75	44
2.5	250	200	150	100
1.25	340	275	200	135

NOTE For more information regarding CTNet segment specifications please refer to the CTNet User Guide.

NOTE Cable grounding: The CTNet cable should be bonded to a suitable grounding point (such as the drive grounding bracket at least once per cabinet).

NOTE This manual was created in conjunction with BK7200 firmware version 01.04.00, this version contains many more features than any previous versions and is built for use on CTNet Revision D BK7200 devices only. For the use of CTNet Revision A/B BK7200 devices please refer to the Beckhoff CTNet I/O User Guide, Issue 1.

5 Getting Started

5.1 Network node address

The DIP switches on the BK7200 are used to specify the node address and the data rate. These should be set-up as required before the module is powered up.

Each node on the network must have a unique node address assigned. This is set-up using DIP switches 1 to 6 on the BK7200. The range of addresses for the bus coupler is limited from 1 to 64 (as shown in Table 5-1).

Table 5-1 Node address look-up table


Node Address	DIP Switch					Node Address	DIP Switch					Node Address	DIP Switch							
	6	5	4	3	2		1	6	5	4	3		2	1	6	5	4	3	2	1
1	0	0	0	0	0	0	23	0	1	0	1	1	0	45	1	0	1	1	0	0
2	0	0	0	0	0	1	24	0	1	0	1	1	1	46	1	0	1	1	0	1
3	0	0	0	0	1	0	25	0	1	1	0	0	0	47	1	0	1	1	1	0
4	0	0	0	0	1	1	26	0	1	1	0	0	1	48	1	0	1	1	1	1
5	0	0	0	1	0	0	27	0	1	1	0	1	0	49	1	1	0	0	0	0
6	0	0	0	1	0	1	28	0	1	1	0	1	1	50	1	1	0	0	0	1
7	0	0	0	1	1	0	29	0	1	1	1	0	0	51	1	1	0	0	1	0
8	0	0	0	1	1	1	30	0	1	1	1	0	1	52	1	1	0	0	1	1
9	0	0	1	0	0	0	31	0	1	1	1	1	0	53	1	1	0	1	0	0
10	0	0	1	0	0	1	32	0	1	1	1	1	1	54	1	1	0	1	0	1
11	0	0	1	0	1	0	33	1	0	0	0	0	0	55	1	1	0	1	1	0
12	0	0	1	0	1	1	34	1	0	0	0	0	1	56	1	1	0	1	1	1
13	0	0	1	1	0	0	35	1	0	0	0	1	0	57	1	1	1	0	0	0
14	0	0	1	1	0	1	36	1	0	0	0	1	1	58	1	1	1	0	0	1
15	0	0	1	1	1	0	37	1	0	0	1	0	0	59	1	1	1	0	1	0
16	0	0	1	1	1	1	38	1	0	0	1	0	1	60	1	1	1	0	1	1
17	0	1	0	0	0	0	39	1	0	0	1	1	0	61	1	1	1	1	0	0
18	0	1	0	0	0	1	40	1	0	0	1	1	1	62	1	1	1	1	0	1
19	0	1	0	0	1	0	41	1	0	1	0	0	0	63	1	1	1	1	1	0
20	0	1	0	0	1	1	42	1	0	1	0	0	1	64	1	1	1	1	1	1
21	0	1	0	1	0	0	43	1	0	1	0	1	0							
22	0	1	0	1	0	1	44	1	0	1	0	1	1							

Safety Information
Introduction
Electrical Installation
CTNet Installation
Getting Started
Terminal Configuration
Cyclic Data
Non-cyclic Data
Diagnostics
KS2000 Configuration Tool
Menu 0
Glossary Of Terms
Index

5.2 Network data rate

Each node on the network must be configured to run at the same data rate. This is set using DIP switches 7 and 8 on the BK7200. The data rates available on the BK7200 range from 5.0 Mbits/sec down to 625 Kbits/sec (312.5 Kbits/sec is not supported) as shown in Table 5-2 *Node address look-up table* .

Figure 5-1 DIP switches

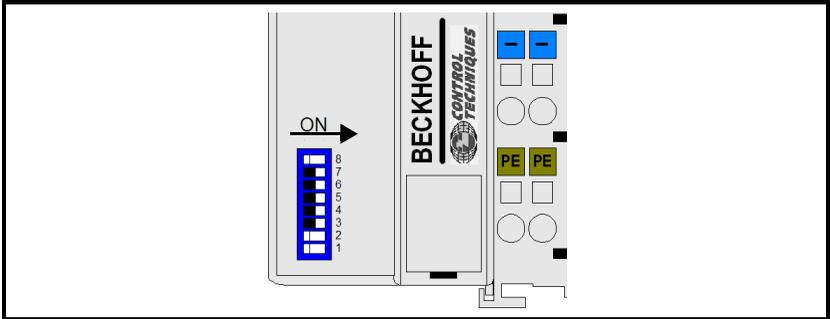

As shown in Figure 5-1 the DIP switches allow an easy way to configure both the node address and the data rate of the BK7200 CTNet bus coupler, to turn on one of the DIP switches push it over to the right hand position as shown above.

The maximum data rate that can be supported depends on the total length of cable in the network and the number of nodes connected to the network.


Table 5-2 Node address look-up table

Data Rate (bits/sec)	DIP 7	DIP 8
5.0 M	0	0
2.5 M	1	0
1.25 M	0	1
625 K	1	1

5.3 DIP switch example

Figure 5-2 below shows dip switches 1, 2, 4 and 8 set to the ON position, from this we can distinguish that because dip switches 1-6 represent the node address, then using Table 5-1 *Node address look-up table* on page 17 we see that the node address of this device is set to 12, and because dip switch 7 is set to the OFF position and dip switch 8 is set to the ON position then using Table 5-2 *Node address look-up table* on page 18 we can see that the data rate of this device is set to 1.25M.

Figure 5-2 DIP switch example

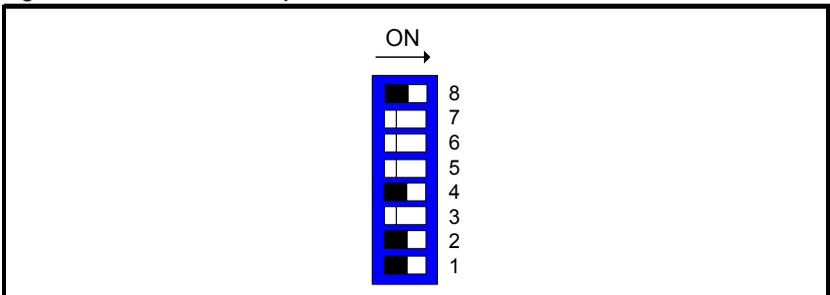

5.4 Synchronization message

The cyclic data synchronization message cannot be generated by the BK7200. To use cyclic data, this message MUST be generated by another node on the network.

5.5 Network initialization

There are several rules that must be satisfied for the network to initialize correctly.

- All nodes must have a unique node address.
- All nodes must have the same data rate setting.
- Only one node must be set to generate the synchronization message.

5.6 Network loss

If the CTNet network connection to a BK7200 node is lost for any reason, this will be indicated by the NET ERR light coming on. The module will automatically re-join the network when the network is re-connected to the bus coupler.

NOTE There is also a Watchdog function available, see Chapter 11.2 *Watchdog* on page 52 for more details.

5.7 Network interruptions

If power is lost to a BK7200 node, this does not prevent the network from continuing (apart from the missing node), or being re-started without the “dead” node (other nodes may re-configure to ignore the “dead” node).

5.8 Beckhoff coupler programming cable

The 4-wire RS232 cable required to program a Beckhoff bus coupler via the KS2000 application is available directly from Beckhoff Automated Systems (<http://www.beckhoff.com> the part number is 'KS2000-cable').

6 Terminal Configuration

As the terminal blocks are connected together, each terminal is connected onto the serial K-bus. The BK7200 bus coupler scans the K-bus during initialization, starting with the terminal block nearest to the bus coupler and checks the ID code. This is repeated for each subsequent terminal connected to the bus. A “database” is built up within the internal memory, which contains a complete image of the status of the input and output terminals. The database acts as a buffer between CTNet and the K-bus, with both systems allowed to read and write data to and from the database.

The database is structured as a two dimensional array, in a similar way to the internal parameter sets of the Unidrive SP. Menu and parameter references are used to address each location within the database.

Each terminal is assigned to a particular pre-defined menu, depending on which type of terminal it is. This means that digital inputs are all grouped together under one menu, the same applies for digital outputs, analog inputs, analog outputs, etc.

The parameter reference for each terminal is assigned on a sequential basis. As each new terminal is found, it is assigned the next unused parameter location in the appropriate menu. This process continues to build the database, until all terminals have been assigned to the database (see Table 6-1 *Terminal parameter allocations*, Chapter 6.9 *Example configuration 1* on page 29 and Chapter 6.10 *Example configuration 2* on page 30 for example configurations).

6.1 BK7200 bus coupler

Combinations of modules may be connected to the BK7200 module, subject to certain limitations:

1. The maximum limit of 64 terminal blocks is not exceeded.
2. No more than 256 digital input channels are connected to a single CTNet bus coupler.
3. No more than 256 digital output channels are connected to a single CTNet bus coupler.
4. No more than 100 analog input channels are connected to a single CTNet bus coupler.
5. No more than 100 analog output channels are connected to a single CTNet bus coupler.
6. No more than 100 special function input channels are connected to a single CTNet bus coupler.
7. No more than 100 special function output channels are connected to a single CTNet bus coupler.

Table 6-1 Terminal parameter allocations

Menu	Description	Colour Code
#1.00 - #1.15	Simple Digital Input	Yellow
#2.00 - #2.15	Simple Digital Output	Red
#3.00 - #3.99	Analog Input	Green
#4.00 - #4.99	Analog Output	Blue
#5.00 - #5.99	Special Function Input	Clear
#6.00 - #6.99	Special Function Output	Clear

6.2 Digital input terminals

Digital inputs are assigned to parameters in menu 1. A maximum of 256 digital inputs can be connected to a single bus coupler (see Table 6-2 *Digital input parameter allocations*). All digital input parameters are read-only. Terminals cannot be addressed individually, but each group of 16 inputs can be read using both cyclic and non-cyclic data commands.

b31	b30	b29	b28	b27	b26	b25	b24	b23	b22	b21	b20	b19	b18	b17	b16

b15	b14	b13	b12	b11	b10	b09	b08	b07	b06	b05	b04	b03	b02	b01	b00
T15	T14	T13	T12	T11	T10	T09	T08	T07	T06	T05	T04	T03	T02	T01	T00

Each parameter contains the data from 16 digital input terminals. CTNet actually transfers data as 32-bit double-words, but the upper 16 bits are not used when reading digital inputs. If there are insufficient terminals to utilise all the bits in a parameter, the other bits will be set to 0.

Table 6-2 Digital input parameter allocations

Reference	I/O Points	Reference	I/O Points
#1.00	T0 - T15	#1.08	T128 - T143
#1.01	T16 - T31	#1.09	T144 - T159
#1.02	T32 - T47	#1.10	T160 - T175
#1.03	T48 - T63	#1.11	T176 - T191
#1.04	T64 - T79	#1.12	T192 - T207
#1.05	T80 - T95	#1.13	T208 - T223
#1.06	T96 - T111	#1.14	T224 - T239
#1.07	T112 - T127	#1.15	T240 - T255

6.2.1 Supported terminals

The bus terminal blocks listed in Table 6-3 *Supported digital input terminals* below are all classed as “Digital Input Terminals” and are all assigned to parameters in menu 1.

NOTE For the latest list of supported digital input terminals contact your supplier or local Drive Centre.

Table 6-3 Supported digital input terminals

Type	Inputs	Outputs	Description
KL1002	2	n/a	2 digital inputs 24v DC, filter 3.0 ms, 4-wire system.
KL1012	2	n/a	2 digital inputs 24v DC, filter 0.2 ms, 4-wire system.
KL1032	2	n/a	2 digital inputs 48v DC, filter 3.0 ms, 4-wire system.
KL1052	2	n/a	2 digital inputs 24v DC, filter 3.0 ms with p/n switching, 4-wire system.
KL1104	4	n/a	4 digital inputs, 24v DC, filter 3.0 ms, 3-wire system.
KL1114	4	n/a	4 digital inputs 24v DC, filter 0.2 ms, 3-wire system.
KL1124	4	n/a	4 digital inputs 5v DC, filter 0.2 ms, 3-wire system.
KL1154	4	n/a	4 digital inputs 24v DC, filter 3.0 ms with p/n switching, 3-wire system.
KL1164	4	n/a	4 digital inputs 24v DC, filter 0.2 ms with p/n switching, 3-wire system.
KL1184	4	n/a	4 digital inputs 24v DC, filter 3.0 ms with n switching, 3-wire system.
KL1194	4	n/a	4 digital inputs 24v DC, filter 0.2 ms with n switching, 3-wire system.
KL1212	2	2	2 digital inputs 24v DC, filter 3.0 ms, 3-wire system, short circuit protected sensor supply.
KL1232	2	n/a	2 Digital Inputs 24V DC, Filter 0.2 ms, 2/3/4-wire system, edge triggered plus expansion.
KL1302	2	n/a	2 Digital Inputs 24V DC, Filter 3.0 ms, 2-wire system, for type 2 sensors.
KL1304	4	n/a	4 Digital Inputs 24V DC, Filter 3.0 ms, 2-wire system, for type 2 sensors.
KL1312	2	n/a	2 Digital Inputs 24V DC, Filter 0.2 ms, 2-wire system, for type 2 sensors.
KL1314	4	n/a	4 Digital Inputs 24V DC, Filter 0.2 ms, 2-wire system, for type 2 sensors.
KL1352	2	n/a	2 Digital Inputs 24V DC, Filter 3.0 ms, 2-wire system, for NAMUR sensors.
KL1362	2	n/a	2 Digital Inputs 24V DC, Filter 3.0 ms, 2-wire system, for break-in alarm.
KL1382	2	n/a	2 Digital Inputs 24V DC, Filter 30.0 ms, 2-wire system, thermistor.
KL1404	4	n/a	4 Digital Inputs 24V DC, Filter 3.0 ms, 4 2-wire system.
KL1408	8	n/a	8 Digital Inputs 24V DC, Filter 3.0 ms with P switching, 2-wire system.
KL1414	4	n/a	4 Digital Inputs 24V DC, Filter 0.2 ms, 4 2-wire system.
KL1418	8	n/a	8 Digital Inputs 24V DC, Filter 0.2 ms with P switching, 2-wire system.
KL1434	4	n/a	4 Digital Inputs 24V DC, Filter 0.2 ms, 4 2-wire system, type 2.
KL1488	8	n/a	8 Digital Inputs 24V DC, Filter 3.0 ms with N switching, 2-wire system.
KL1498	8	n/a	8 Digital Inputs 24V DC, Filter 0.2 ms with N switching, 2-wire system.
KL1702	2	n/a	2 Digital Inputs 120V/230V AC, 4-wire system.
KL1712	2	n/a	2 Digital Inputs 120V AC/DC, 4-wire system.
KL1722	2	n/a	2 Digital Inputs 120V/230V AC, 4-wire system, no power contacts.
KM1002	16	n/a	16 Digital Inputs 24V DC, Filter 3.0 ms, 1/2/3-pin system variants.
KM1004	32	n/a	32 Digital Inputs 24V DC, Filter 3.0 ms, 1/2/3-pin system variants.
KM1008	64	n/a	64 Digital Inputs 24V DC, Filter 3.0 ms, 1/2/3-pin system variants.

Type	Inputs	Outputs	Description
KM1012	16	n/a	16 Digital Inputs 24V DC, Filter 0.2 ms, 1/2/3-pin system variants.
KM1014	32	n/a	32 Digital Inputs 24V DC, Filter 0.2 ms, 1/2/3-pin system variants.
KM1018	64	n/a	64 Digital Inputs 24V DC, Filter 0.2 ms, 1/2/3-pin system variants.

6.3 Digital output terminals

Digital outputs are assigned to parameters in menu 2. All digital output parameters are read/write. A maximum of 256 digital outputs can be connected to a single bus coupler (see Table 6-5 *Digital output parameter allocations*). Terminals cannot be addressed individually, but each group of 16 outputs can be written to or read from using both cyclic and non-cyclic data commands.

b31	b30	b29	b28	b27	b26	b25	b24	b23	b22	b21	b20	b19	b18	b17	b16
M15	M14	M13	M12	M11	M10	M09	M08	M07	M06	M05	M04	M03	M02	M01	M00

b15	b14	b13	b12	b11	b10	b09	b08	b07	b06	b05	b04	b03	b02	b01	b00
T15	T14	T13	T12	T11	T10	T09	T08	T07	T06	T05	T04	T03	T02	T01	T00

Digital outputs are controlled in groups of 16 bits, with the upper 16 bits of the 32-bit double-words acting as “mask bits”. Mask bits determine whether the corresponding data bit is actually written into the database. This allows addressing of the same block of digital outputs and only update certain outputs. If a mask is set to 1, the corresponding data bit will be updated in the database. If a mask bit is set to 0, the corresponding data bit is not updated in the database.

6.3.1 Mask bits example

A bit mask extracts the status of certain bits in a binary string. For example if we have the binary string 01111010 and it is required to extract the status of the second and sixth bits counting along from the right hand side, a bit mask such as 00100010 would be needed along with the use of the bitwise ‘AND’ operator, recalling that 1 AND 1 = 1, with 0 otherwise, we would find the status of the second and sixth bits, however if the mask value of bit 2 changed back to 0 the value of output bit 2 would stay at 1, to change the value of the second output bit back to 0, mask bit 2 would need to be set to 1 and output bit 2 would need to be set to 0. The functions of this bit mask are shown in Table 6-4 below.

Table 6-4 Mask bit functions

Mask Value	Data Value	Output
0	0	No change from last value (0 or 1)
0	1	No change from last value (0 or 1)
1	0	0
1	1	1

This could be used in practice if only the values of particular bits are required.

Table 6-5 Digital output parameter allocations

Reference	I/O Points	Reference	I/O Points
#2.00	T0 - T15	#2.08	T128 - T143
#2.01	T16 - T31	#2.09	T144 - T159
#2.02	T32 - T47	#2.10	T160 - T175
#2.03	T48 - T63	#2.11	T176 - T191
#2.04	T64 - T79	#2.12	T192 - T207
#2.05	T80 - T95	#2.13	T208 - T223
#2.06	T96 - T111	#2.14	T224 - T239
#2.07	T112 - T127	#2.15	T240 - T255

6.3.2 Supported terminals

The bus terminal blocks listed in Table 6-6 *Supported digital output terminals* below are all classed as “Digital Output Terminals” and are all assigned to parameters in menu 2.

NOTE For the latest list of supported digital output terminals either contact your supplier or local Drive Centre.

Table 6-6 Supported digital output terminals

Type	Inputs	Outputs	Description
KL2012	n/a	2	2 Digital Outputs 24V DC, 0.5A, 4-wire system.
KL2022	n/a	2	2 Digital Outputs 24V DC, 2.0A, 4-wire system.
KL2032	n/a	2	2 Digital Outputs 24V DC, 0.5A, 4-wire system, reverse polarity protection.
KL2114	n/a	4	4 Digital Outputs 24V DC, 0.5A, 3-wire system.
KL2124	n/a	4	4 Digital Outputs 5V DC, 20mA, 3-wire system.
KL2134	n/a	4	4 Digital Outputs 24V DC, 0.5A, 3-wire system, reverse polarity protection.
KL2184	n/a	4	4 Digital Outputs 24V DC, 0.5A, 3-wire system, with N switching.
KL2212	n/a	2	2 Digital Outputs 24V DC, 0.5A, 4-wire system, with diagnostics.
KL2404	n/a	4	4 Digital Outputs 24V DC, 0.5A, 2-wire system.
KL2408	n/a	8	8 Digital Outputs 24V DC, 0.5A, 2-wire system, with P switching.
KL2424	n/a	4	4 Digital Outputs 24V DC, 2.0A, 2-wire system.
KL2488	n/a	8	8 Digital Outputs 24V DC, 0.5A, 2-wire system, with N switching.
KL2602	n/a	2	2 Relay Outputs 230V AC/30V DC, 5A, make contacts.
KL2612	n/a	2	2 Relay Outputs 125V AC/30V DC, 0.5A AC/2A DC, change-over.
KL2622	n/a	2	2 Relay Outputs 230V AC/30V DC, 5A, make contacts.
KL2631	n/a	2	1 Relay Output 400V AC/300V DC, 2 outputs (1 un-used).
KL2641	2	2	1 Relay Output 230V AC, 16A, with manual operation, 2 inputs(status) 2 outputs(1 un-used).
KL2652	n/a	2	2 Relay Outputs 230V AC/300V DC, 1A, change-over.
KL2702	n/a	2	2 MOSFET Outputs 230V AC/DC, 0.3A.
KL2712	n/a	2	2 Triac Outputs 12-230V AC, 0.5A.
KL2722	n/a	2	2 Triac Outputs 12-230V AC, 0.6mA, mutually locked make contacts.
KL2732	n/a	2	2 Triac Outputs 12-230V AC, 1A, mutually locked make contacts, potential free switches.
KM2002	n/a	16	16 Digital Outputs 24V DC, 0.5A, 1/2/3-pin variants.
KM2004	n/a	32	32 Digital Outputs 24V DC, 0.5A, 1/3-pin variants.
KM2008	n/a	64	64 Digital Outputs 24V DC, 0.5A, 1/3-pin variants.
KM2022	n/a	16	16 Digital Outputs 24V DC, 2.0A, 1/2/3-pin variants.

6.4 Analog input terminals

As seen in Table 6-7 *Analog input parameter allocations*, analog inputs are assigned to menu 3. A maximum of 100 analog inputs can be connected to a single bus coupler. All parameters are read-only.

Table 6-7 Analog input parameter allocations

Reference	I/O Point
#3.00	0
#3.01	1
#3.02	2
#3.xx	xx
#3.98	98
#3.99	99

6.4.1 Supported terminals

The bus terminal blocks listed in Table 6-8 *Supported analog input terminals* are all classed as “Analog Input Terminals” and are all assigned to parameters in menu 3.

NOTE For the latest list of supported analog input terminals either contact your supplier or local Drive Centre.

Table 6-8 Supported analog input terminals

Type	Inputs	Outputs	Description
KL3001	1	n/a	1 Analog input, $\pm 10V$, 12 bit.
KL3002	2	n/a	2 Analog inputs, $\pm 10V$, 12 bit.
KL3011	1	n/a	1 Analog input, 0-20mA, 12 bit.
KL3012	2	n/a	2 Analog inputs, 0-20mA, 12 bit.
KL3021	1	n/a	1 Analog input, 4-20mA, 12 bit.
KL3022	2	n/a	2 Analog inputs, 4-20mA, 12 bit.
KL3041	1	n/a	1 Analog input, 0-20mA, 12 bit, loop-powered.
KL3042	2	n/a	2 Analog inputs, 0-20mA, 12 bit, loop-powered.
KL3044	4	n/a	4 Analog inputs, 0-20mA, 12 bit.
KL3051	1	n/a	1 Analog input, 4-20mA, 12 bit, loop-powered.
KL3052	2	n/a	2 Analog inputs, 4-20mA, 12 bit, loop-powered.
KL3054	4	n/a	4 Analog inputs, 4-20mA, 12 bit.
KL3061	1	n/a	1 Analog input, 0-10V, 12 bit.
KL3062	2	n/a	2 Analog inputs, 0-10V, 12 bit.
KL3064	4	n/a	4 Analog inputs, 0-10V, 12 bit.
KL3102	2	n/a	2 Analog inputs, $\pm 10V$, 16 bit.
KL3112	2	n/a	2 Analog inputs, 0-20mA, 16 bit.
KL3122	2	n/a	2 Analog inputs, 4-20mA, 15 bit.
KL3132	2	n/a	2 Analog inputs, $\pm 10V$, 16 bit.
KL3142	2	n/a	2 Analog inputs, 0-20mA, 16 bit.
KL3152	2	n/a	2 Analog inputs, 4-20mA, 16 bit.
KL3162	2	n/a	2 Analog inputs, 0-10V, 16 bit.
KL3172	2	n/a	2 Analog inputs, 0-2V, 16 bit.
KL3182	2	n/a	2 Analog inputs, $\pm 2V$, 16 bit.

Type	Inputs	Outputs	Description
KL3201	1	n/a	1 RTD for resistance thermometers, preset PT100.
KL3202	2	n/a	2 RTD for resistance thermometers, preset PT100.
KL3204	4	n/a	4 RTD for resistance thermometers, preset PT100.
KL3311	1	n/a	1 Thermocouple input, open-circuit recognition, preset type k.
KL3312	2	n/a	2 Thermocouple inputs, open-circuit recognition, preset type k.
KL3314	4	n/a	4 Thermocouple inputs, open-circuit recognition, preset type k.
KL3351	2	n/a	1 resistor bridge input (strain gauge), 16 bit.
KL3356	2	n/a	1 resistor bridge input (strain gauge), 16 bit.
KL3403	3	n/a	3 phase power measurement, 500V, 1A.
KL3404	4	n/a	4 Analog inputs, $\pm 10V$, 12 bit.
KL3408	8	n/a	8 Analog inputs, $\pm 10V$, 12 bit.
KL3444	4	n/a	4 Analog inputs, 0-20mA, 12 bit.
KL3448	8	n/a	8 Analog inputs, 0-20mA, 12 bit.
KL3454	4	n/a	4 Analog inputs, 4-20mA, 12 bit.
KL3458	8	n/a	8 Analog inputs, 4-20mA, 12 bit.
KL3464	4	n/a	4 Analog inputs, 0-10V, 11 bit.
KL3468	8	n/a	8 Analog inputs, 0-10V, 11 bit.

All unipolar inputs are scaled where minimum input is 0 and a maximum input is 32767. For a bipolar input, -10V will return -32768 (see Table 6-9 *Analog input voltage references* below for details).

Table 6-9 Analog input voltage references

Input Range	Minimum Input	Maximum Input	Resolution
0-10V	0V = 0	+10V = 32767	5mV
$\pm 10V$	-10V = -32768	+10V = 32767	5mV
0-20mA	0mA = 0	20mA = 32767	5 μ A
4-20mA	4mA = 0	20mA = 32767	4 μ A

6.5 Analog output terminals

Analog Outputs are assigned to menu 4. A maximum of 100 analog outputs can be connected to a single bus coupler (see Table 6-10 *Analog output parameter allocations*). All parameters are write only.

Table 6-10 Analog output parameter allocations

Reference	I/O Point
#4.00	0
#4.01	1
#4.02	2
#4.xx	xx
#4.98	98
#4.99	99

6.5.1 Supported terminals

The bus terminal blocks listed in Table 6-11 *Supported analog output terminals* are all classed as "Analog Output Terminals" and are all assigned to parameters within menu 4.

NOTE For the latest list of supported analog output terminals either contact your supplier or local Drive Centre.

Table 6-11 Supported analog output terminals

Terminal	Inputs	Outputs	Description
KL4001	n/a	1	1 Analog output, 0-10V, 12 bit.
KL4002	n/a	2	2 Analog output, 0-10V, 12 bit.
KL4004	n/a	4	4 Analog output, 0-10V, 12 bit.
KL4011	n/a	1	1 Analog output, 0-20mA, 12 bit.
KL4012	n/a	2	2 Analog output, 0-20mA, 12 bit.
KL4014	n/a	4	4 Analog output, 0-20mA, 12 bit.
KL4021	n/a	1	1 Analog output, 4-20mA, 12 bit.
KL4022	n/a	2	2 Analog output, 4-20mA, 12 bit.
KL4024	n/a	4	4 Analog output, 4-20mA, 12 bit.
KL4031	n/a	1	1 Analog output, ±10V, 12 bit.
KL4032	n/a	2	2 Analog output, ±10V, 12 bit.
KL4034	n/a	4	4 Analog output, ±10V, 12 bit.
KL4112	n/a	2	2 Analog output, 0-20mA, 15 bit.
KL4132	n/a	2	2 Analog output, ±10V, 12 bit.
KL4404	n/a	4	4 Analog output, 0-10V, 12 bit.
KL4408	n/a	8	8 Analog output, 0-10V, 12 bit.
KL4414	n/a	4	4 Analog output, 0-20mA, 12 bit.
KL4418	n/a	8	8 Analog output, 0-20mA, 12 bit.
KL4424	n/a	4	4 Analog output, 4-20mA, 12 bit.
KL4428	n/a	8	8 Analog output, 4-20mA, 12 bit.
KL4434	n/a	4	4 Analog output, ±10V, 12 bit.
KL4438	n/a	8	8 Analog output, ±10V, 12 bit.
KL4494	2	2	2 Analog output 2 input, ±10V, 12 bit.

6.6 Special function input terminals

A maximum of 100 special function input channels can be connected to a BK7200 CTNet bus coupler.

Process data exchanges are carried out through parameters #5.00 to #5.99, where each of these parameters represents a channel on the terminal bus. Each individual terminal determines the format of the process data that is to be used. Particular terminals may have their control/status byte as the least significant byte.

Register communication with the internal data structure of special function terminals can be achieved through Beckhoffs own KS2000 software.

6.7 Special function output terminals

A maximum of 100 special function outputs can be connected to a BK7200 CTNet bus coupler.

Process data exchanges are carried out through parameters #6.00 to #6.99, where each of these parameters represents a channel on the terminal bus. Each individual terminal determines the format of the process data that is to be used. Particular terminals may have their control/status byte as the Least Significant Byte.

Register communication with the internal data structure of special function terminals can be achieved through Beckhoffs own KS2000 software.


6.8 Large terminals

Figure 6-1 *KM2008 large digital output terminal* shows a KM2008 large digital output terminal.

- The Beckhoff KM2008 is a large digital output terminal giving access to up to 64 digital outputs from the same terminal.
- The first column of blocks on the KM2008 (the top left and bottom left) contain 16 digital outputs, these are represented by bits 0 - 15 of parameter #2.00.
- The second column represent bits 0 - 15 of parameter #2.01.
- The third column represent bits 0 - 15 of parameter #2.02.
- And the fourth and final column represent bits 0 - 15 of parameter #2.03.
- The lights to the left of each of the digital output channels light up when the specific channel is enabled.

Large digital output terminals such as the KM2008 operate as any other digital output terminal.

Figure 6-1 KM2008 large digital output terminal

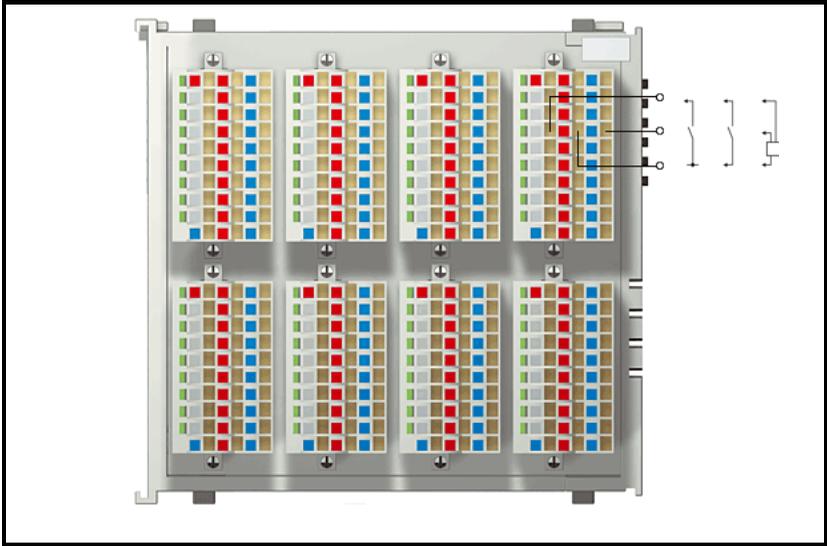

There are also large digital input terminals such as the KM1002. These large terminals only take up 1 of the allocated maximum 64 terminals on the K-bus allowing for easy referencing of specific channels.

6.9 Example configuration 1

The configuration shown in Figure 6-2 *Terminal configuration example 1* below provides 4 digital inputs and 6 digital outputs, plus 2 analog inputs and outputs. Table 6-12 *Terminal configuration example 1* shows the parameters which can be accessed to read the status of the input terminals, or update the status of the output terminals.

Figure 6-2 Terminal configuration example 1

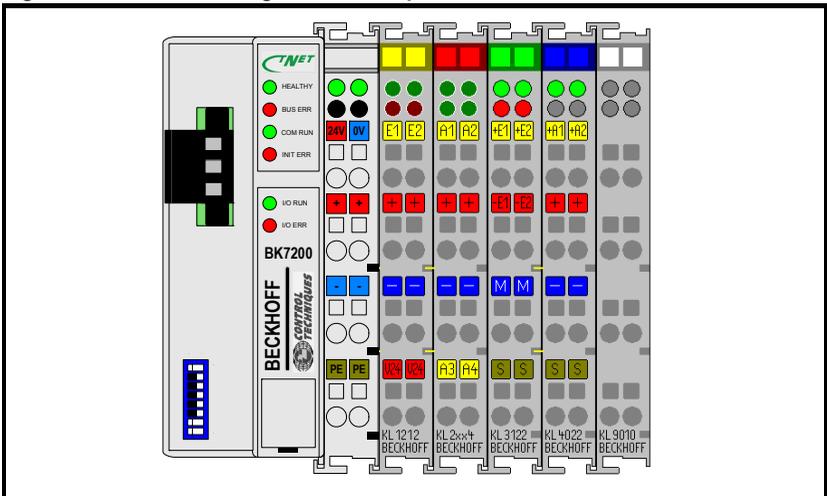


Table 6-12 Terminal configuration example 1

Terminal Position	Terminal	Terminal Function	Parameter Reference
1	KL1212	Digital Input 0	#1.00 bit 0
1	"	Digital Input 1	#1.00 bit 1
1	"	Digital Input 2	#1.00 bit 2
1	"	Digital Input 3	#1.00 bit 3
1	"	Digital Output 0	#2.00 bit 0
1	"	Digital Output 1	#2.00 bit 1
2	KL2114	Digital Output 2	#2.00 bit 2
2	"	Digital Output 3	#2.00 bit 3
2	"	Digital Output 4	#2.00 bit 4
2	"	Digital Output 5	#2.00 bit 5
3	KL3122	Analog Input 0	#3.00
3	"	Analog Input 1	#3.01
4	KL4022	Analog Output 0	#4.00
4	"	Analog Output 1	#4.01
5	KL9010	K-bus Terminator	Not Applicable

6.10 Example configuration 2

The configuration in Figure 6-3 *Terminal configuration example 2* has been extended to provide 10 digital inputs and 14 digital outputs, plus 15 analog inputs and 4 analog outputs. The arrows shown at the bottom of Figure 6-3 indicate the new positions of the terminals used in Figure 6-2 *Terminal configuration example 1* on page 29. Table 6-13 *Terminal configuration example 2* on page 31 shows the parameters which have been assigned to the terminals which can be accessed to read the status of the input terminals, or update the status of the output terminals.

Figure 6-3 Terminal configuration example 2

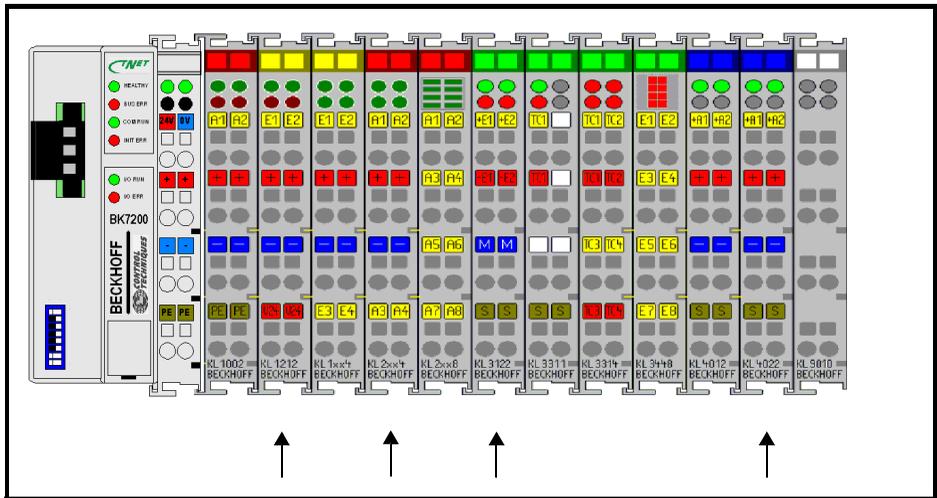


Table 6-13 Terminal configuration example 2

KLx xxx	Terminal	Input/Output Function	Parameter Reference		KLx xxx	Terminal	Input/Output Function	Parameter Reference
1	KL1002	Digital Input 0	#1.00 bit 0		5	"	Digital Output 12	#2.00 bit 12
1	"	Digital Input 1	#1.00 bit 1		5	"	Digital Output 13	#2.00 bit 13
2	KL1212	Digital Input 2	#1.00 bit 2		6	KL3122	Analog Input 0	#3.00
2	"	Digital Input 3	#1.00 bit 3		6	"	Analog Input 1	#3.01
2	"	Digital Input 4	#1.00 bit 4		7	KL3311	Analog Input 2	#3.02
2	"	Digital Input 5	#1.00 bit 5		8	KL3314	Analog Input 3	#3.03
2	"	Digital Output 0	#2.00 bit 0		8	"	Analog Input 4	#3.04
2	"	Digital Output 1	#2.00 bit 1		8	"	Analog Input 5	#3.05
3	KL1114	Digital Input 6	#1.00 bit 6		8	"	Analog Input 6	#3.06
3	"	Digital Input 7	#1.00 bit 7		9	KL3448	Analog Input 7	#3.07
3	"	Digital Input 8	#1.00 bit 8		9	"	Analog Input 8	#3.08
3	"	Digital Input 9	#1.00 bit 9		9	"	Analog Input 9	#3.09
4	KL2114	Digital Output 2	#2.00 bit 2		9	"	Analog Input 10	#3.10
4	"	Digital Output 3	#2.00 bit 3		9	"	Analog Input 11	#3.11
4	"	Digital Output 4	#2.00 bit 4		9	"	Analog Input 12	#3.12
4	"	Digital Output 5	#2.00 bit 5		9	"	Analog Input 13	#3.13
5	KL2408	Digital Output 6	#2.00 bit 6		9	"	Analog Input 14	#3.14
5	"	Digital Output 7	#2.00 bit 7		10	KL4012	Analog Output 0	#4.00
5	"	Digital Output 8	#2.00 bit 8		10	"	Analog Output 1	#4.01
5	"	Digital Output 9	#2.00 bit 9		11	KL4022	Analog Output 2	#4.02
5	"	Digital Output 10	#2.00 bit 10		11	"	Analog Output 3	#4.03
5	"	Digital Output 11	#2.00 bit 11		12	KL9010	K-bus Terminator	Not Applicable

Digital inputs and outputs should be grouped together, as they need to have power supplied through the power contacts to drive external relays, etc. Voltage output analog modules do not use the power contacts, so they should be placed at the end of the line of terminals but before the K-bus terminator terminal which must always be last.

It can be seen that the digital input and output terminals have been fitted BEFORE the analog terminals. However, this does not affect the addressing of the analog input and output terminals which occurs when the K-bus first scans the terminals during initialization, although the analog input terminal will now be the 6th terminal to be found, it is still the 1st analog input terminal. Therefore, when it is entered into the database, both inputs will be assigned the first available parameter numbers in menu 3, which will still be 0 and 1. Hence, there is no change in the terminal address. As additional analog input modules are added, they will get the next available parameters in menu 3.

NOTE When adding input and output terminals to a bus coupler, ensure that each type of input is added after the last terminal block of a similar type. This will ensure that all existing terminal and parameter mappings will not be affected.

NOTE Table 6-13 above terminals KL1212, KL2114, KL3122 and KL4022 have been highlighted to show the new positions of the terminals from Table 6-12 *Terminal configuration example 1* on page 30.

Safety Information
Introduction
Electrical Installation
CTNet Installation
Getting Started
Terminal Configuration
Cyclic Data
Non-cyclic Data
Diagnostics
KS2000 Configuration Tool
Menu 0
Glossary Of Terms
Index

7 Cyclic Data

SyPT Pro must be used to configure a BK7200 module to transmit cyclic data over the CTNet network. SyPT provides a graphical network configuration tool, which displays all configured cyclic links between nodes. This manual assumes that the user has a basic knowledge of using SyPT to configure CTNet networks. For more information refer to the CTNet user guide.

7.1 Fast and slow cyclic data channels

To configure cyclic data transfers, “data links” must be defined for either fast or slow cyclic data channels. Each link is configured to transmit a defined set of consecutive registers or parameters from within a particular menu in the BK7200, to a defined set of consecutive registers or parameters in the target node. This process is known as “binding” registers together.

There are two limitations when defining the cyclic data links to be transmitted and the number of registers to be transmitted by the BK7200 module:


1. A maximum of 20 separate links can be defined for a single node. This total includes both fast and slow data links.
2. No individual link may transfer more than 20 consecutive registers.

Each link runs on successive token rotations. The first defined link is transmitted on the first token rotation after the “synchronization message”, the next link on the next token rotation and so on.

7.2 Cyclic/Non-cyclic data - time allocations

Figure 7-1 below shows a typical example of time allocation of cyclic and non-cyclic data over an 80ms period on CTNet. The example below is set-up such is that the fast cyclic reads occur every 10ms and the slow cyclic reads occur every 50ms (#MM.25 of the SM-Applications producing the cyclic data rates = 510). As you can see the fast cyclic data runs each time 10ms elapses, after 50ms the fast cyclic reads occur as usual and then the slow cyclic reads occur straight after all fast cyclic reads have finished (fast cyclic reads always finish before the slow cyclic reads can start). The area depicted by the grey area in Figure 7-1 represents slack time not used by the cyclic data, this is available for use by any non-cyclic data (so long as the fast/slow cyclic reads do not take up all available time between each set of reads).

Figure 7-1 Cyclic/Non-cyclic time allocations

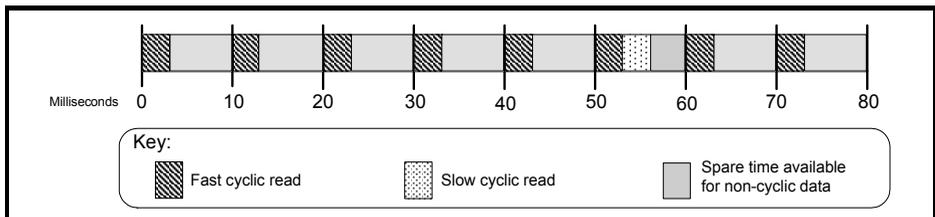

7.3 Overloading network nodes

Care must be taken when configuring a network to ensure that the BK7200 does not get overloaded with incoming messages. The BK7200 is capable of processing up to 4 messages every millisecond (4000 messages per second). If the module is overloaded with incoming messages, messages may be lost before they can be processed and the cyclic data transfer may be corrupted. The number of messages arriving over CTNet can be monitored in #0.02 in the BK7200 bus coupler (see Chapter 11.1 *Menu 0 parameters* on page 49 for more information).

The K-bus and CTNet are asynchronous meaning the terminal update time via the serial K-bus will decrease as the CTNet message loading increases and this can be monitored in #0.03 in the BK7200. The balance between the CTNet cyclic data update and the K-bus terminal update time depends on both the amount of CTNet messages to be processed and the number of terminals connected to the coupler.


A good example of this is where the BK7200 could become overloaded when every node on the network is sending cyclic data to the BK7200. On a large network, say 50 drives, this can mean that the bus coupler suddenly receives 50 messages in very quick succession, cannot process them quickly enough and loses some of the messages. The effect of the lost messages could indicate to the monitoring node that several drives are not functioning, when this is not actually the case and all nodes are operating correctly.

7.3.1 Aliasing

Aliasing is a signal processing term. Aliasing occurs when a system is measured at an insufficient sampling rate. It is perhaps best explained through example.

Figure 7-1 below shows a switch with the lower position being 'Off' and at its higher position the switch is 'On'. Below the signal of the switch is the sample rate for the signal of the switch and the actual measured signal are not the same, most importantly the area circled below where the switch was turned on for a short period of time was missed by the measured signal because the signal was not sampled within this time

Figure 7-2 Aliasing example

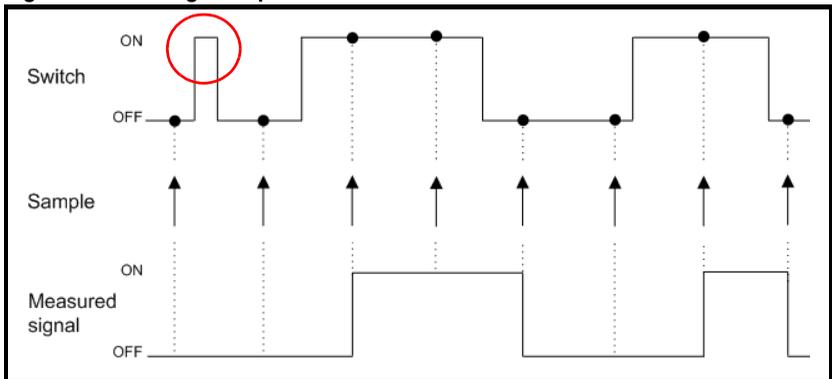

7.4 Asynchronous sampling

In this section the following shorthand expressions will be used:

$f_{\text{CyclicDataRate}}$ = Parameter #0.02 of the Beckhoff 7200 bus coupler (CTNet cycles per second).

$f_{\text{k-bus}}$ = Parameter #0.03 of the Beckhoff 7200 bus coupler (K-bus cycles per second).

No sample will be missed over CTNet if $f_{\text{k-bus}} > f_{\text{CyclicDataRate}}$ and $f_{\text{CyclicDataRate}} > 0$.

$f_{\text{CyclicDataRate}}$ is the amount of the cycles per second of fast and slow cyclic data, as well as non-cyclic data.

To decrease the time between the sample on the k-bus and the value being received over CTNet, modify the CTNet sync set-up (#MM.25) on the SM-Applications (i.e. fast and slow cyclic data) ensuring $f_{\text{k-bus}} > f_{\text{CyclicDataRate}}$.

7.4.1 Sample rate example 1

This is a simple example describing the steps which would need to be calculated in order to read an analog signal, maximum frequency of 100 Hz over fast cyclic data without aliasing (missing transitions).

If parameter #MM.25 of the SM-Applications module has a value of '1005', this would mean that fast cyclic communications would be set-up to run every 5ms and slow cyclic communications to run every 50ms ($10\text{ms} * 5\text{ms}$).

$f_{\text{CyclicDataRate}}$ would read 200, assuming that $f_{\text{k-bus}} > f_{\text{CyclicDataRate}}$ (*fast cyclic data component*), then there would be no aliasing due to the k-bus; this is calculated as follows:

The highest possible frequency that can be sampled =

$$f_{\text{CyclicDataRate}} \text{ (fast cyclic data component)} = 200 / 2 = 100 \text{ Hz}$$

This means that no aliasing of the signal will occur by anything other than the 'Analog to Digital Converter' (ADC) in the analog terminal (see specification for ADC sample rate in module documentation).

This example is for fast cyclic communications, if we wanted to use slow cyclic communications to transfer the signal, the calculation is as follows:

The highest frequency that could be sampled =

$$f_{\text{CyclicDataRate}} \text{ (slow cyclic data component)} = 20 / 2 = 10 \text{ Hz}$$

In this example there will be aliasing apparent in the signal received over CTNet, for every 10 cycles of the 100 Hz signal, only one sample would be read. This may be acceptable if the data being received over CTNet is non-urgent, or only processed in a low priority task, tolerating aliasing will reduce the need for high speed cyclic data, thus reducing CTNet traffic.

7.5 Setting up the BK7200 for cyclic communications

7.5.1 Introduction

Chapter 7.5.3 *Example configuration* shows a step-by-step process of how to set up the BK7200 bus coupler for cyclic communications.

7.5.2 Required equipment


- Beckhoff BK7200 CTNet bus coupler.
- Beckhoff input terminals.
- Beckhoff output terminals.
- Beckhoff bus end terminal (e.g. KL9010).
- SyPT Pro.
- Unidrive SP (or any other drive with CTNet capability).
- SM-Applications module (or any other module with CTNet capability).

7.5.3 Example configuration

Below shows the set-up which will be used for the following example of how to set-up cyclic communications on a BK7200 CTNet bus coupler.


The set-up contains a BK7200 CTNet bus coupler (plus any connected terminals) connected via CTNet to an SM-Applications module inserted on a Unidrive SP, the Unidrive SP is then connected via the CT USB to RS485 communications cable (part number: 4500-0096) to a PC with SyPT Pro installed, this will allow the use of SyPT Pro to configure any cyclic communications on the network.

Figure 7-3 BK7200 network configuration

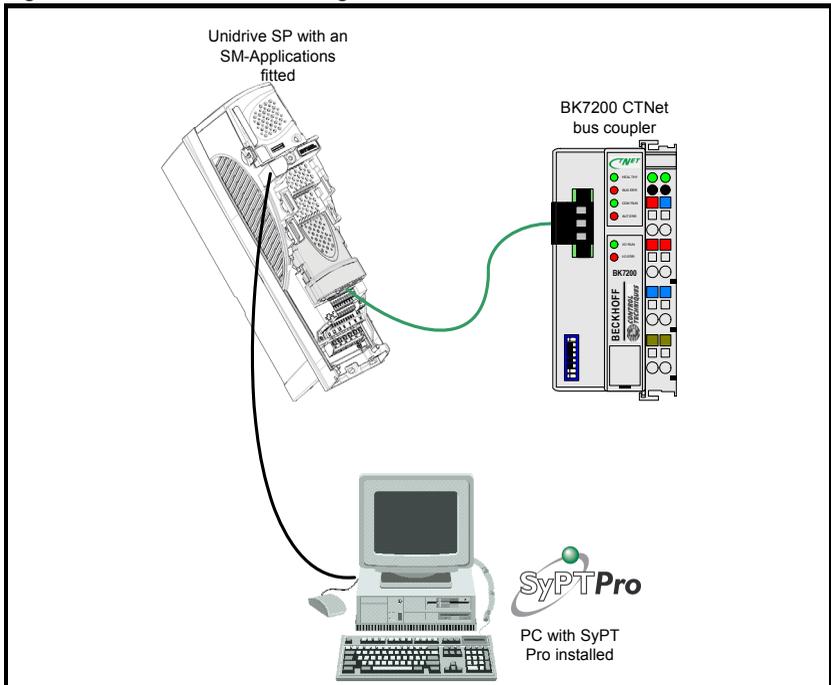

Once the SyPT Pro application software has been started and the configuration is set-up as required, you should have a configuration that at the least contains a Unidrive SP with an SM-Applications module (or any other CNet compatible drive) plus a BK7200 CNet bus coupler connected via CNet as shown in Figure 7-4.

Figure 7-4 SyPT Pro set-up

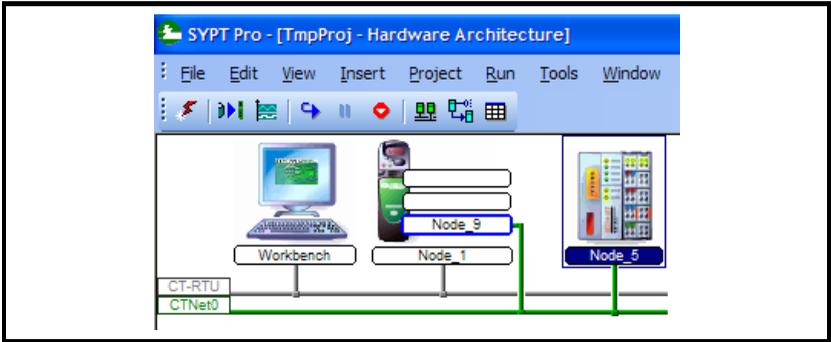

The icon shown is the 'Cyclic Data' icon,  click on it, this will open the cyclic data window shown in Figure 7-5.

Figure 7-5 Cyclic data links window


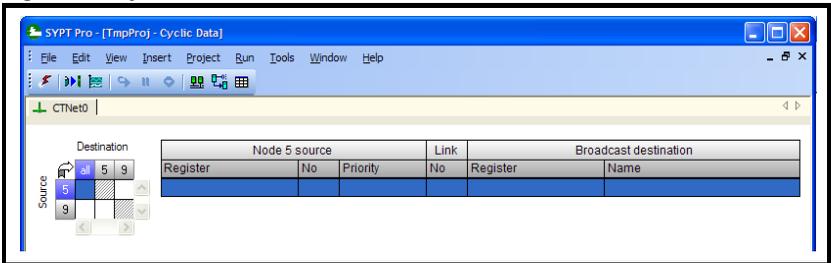


Figure 7-5 shows (if any) the cyclic data links that are set-up between nodes, as you can see from Figure 7-4 on page 36 node 9 is an SM-applications module on the Unidrive SP and node 5 is the Beckhoff BK7200 CNet bus coupler. The left hand matrix shows all current links between all nodes and the table situated on the right hand side shows links from specific node to node relationships.

In order to create a cyclic link with a source of the BK7200 coupler and a destination of the SM-applications module, you must ensure that SyPT pro is offline.


Next as shown in Figure 7-6, as the beckhoff coupler is the source of the link, parameter #1.00 will be the source, the reason being that the input terminal which cyclic communications will be set-up on is a digital input KL1114 which is the first digital input terminal on the K-bus, the first channel of this terminal will be linked to incoming PLC register `_S00%` of the SM-Applications module (`_S00%` could have also been represented as `#73.00`). You can see that there is also the option of whether or not you want SLOW or FAST cyclic communications.

Figure 7-6 Entering a cyclic data link (1)

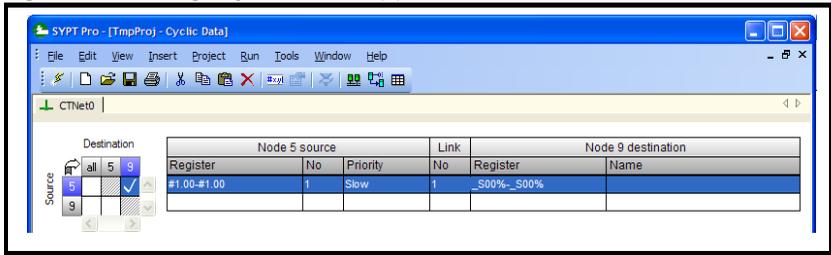

As shown in Figure 7-7, the SM-Applications is the source of the link, to make programming easier in terms of continuity it makes sense to start at the first available parameter, which in this case would be OUT PLC register 0 (_R00% or #72.00). This PLC register will be linked to parameter #2.00 of the BK7200 bus coupler (this represents the first 16 bits of digital outputs on the bus coupler). These is also an option as to whether you want slow or fast cyclic communications.


Figure 7-7 Entering a cyclic data link (2)

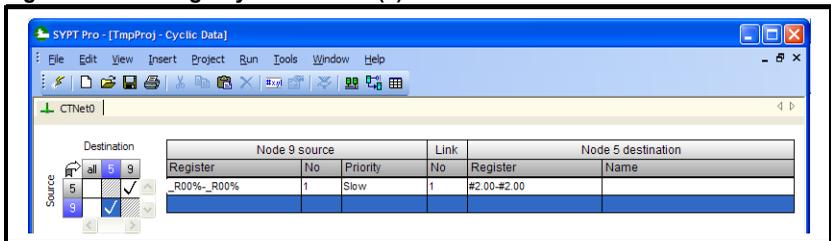

7.5.4 Downloading the cyclic data links to the SM-Applications

1. Next, save the project.
2. Click the 'Project' drop-down list, then 'Rebuild All' to add the cyclic links to the nodes.
3. Go back 'on-line'.
4. Select 'Project', 'Download All', then 'OK', to send the cyclic links to the nodes.
5. You may notice that a red warning box has appeared under the cyclic link table stating that the 'link defined in SYPT but not present in target. If this happens then you need to do to get rid of the warning, select 'Project', 'Download', choose the nodes you wish to download, which in this case is all of them, click 'OK'.

Figure 7-8 Cyclic link defined in target but not present in node

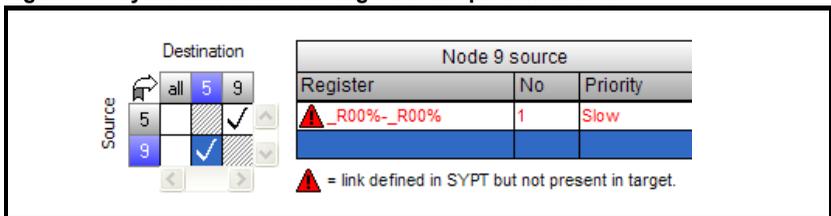

6. The warning will now be cleared.
7. Your cyclic communications should now be successfully set-up, see section 7.5.5 *Checking the cyclic links* on page 38 for more information on how to check


that your cyclic links are correctly functioning.

7.5.5 Checking the cyclic links

An easy way to check whether or not the cyclic communications are configured successfully is as follows:


- While the cyclic communications are running, open the 'Watch window' in SyPT (shown in Figure 7-9 below).

Figure 7-9 Watch Window (1)

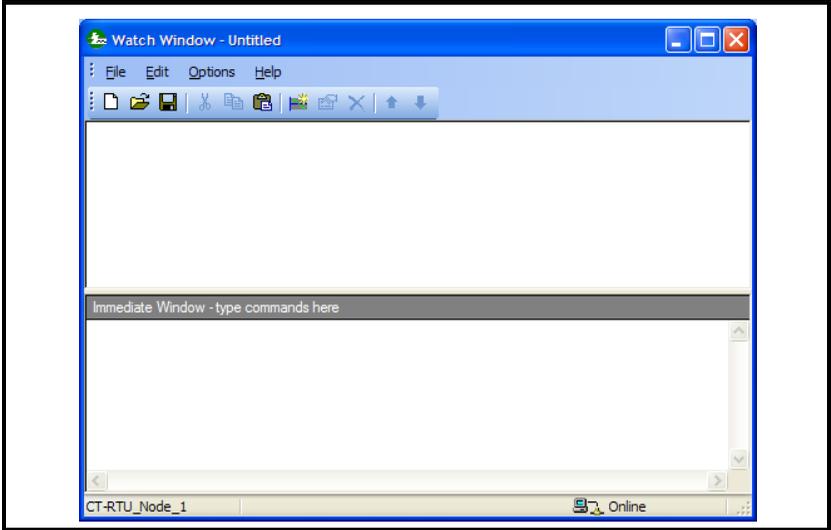

- Click the 'New Item'  icon and the new item window will open as shown in Figure 7-10.


Figure 7-10 Add new item to the Watch Window

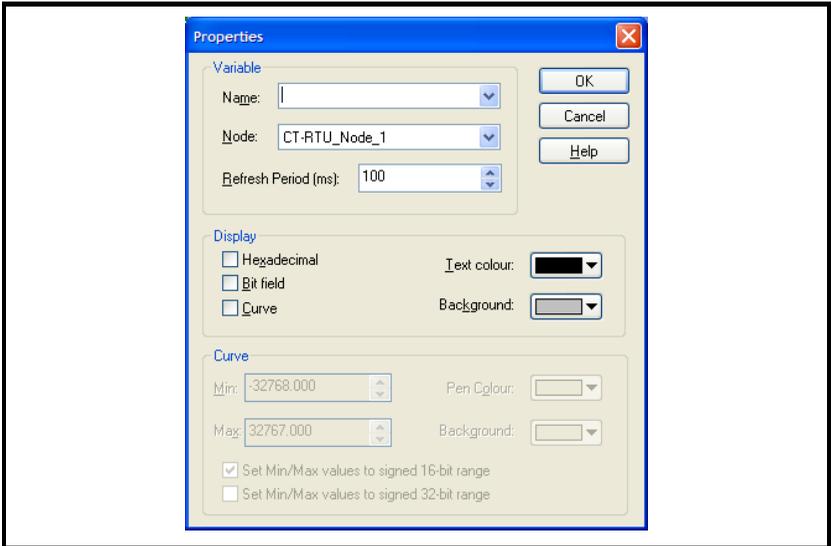

7.5.6 Testing the cyclic communications

1. Firstly select the 'Node' which represents the Beckhoff bus coupler, which in this instance is node 5.
2. In the 'Name' category type in '#1.00'.
3. Under the 'Display' area tick the 'Bit Field' check box.
4. Click 'OK'
5. Open the 'New Item' window again, but this time in the 'Name' category type in '_S00%' and the node should be set to that of the SM-Applications module which in this example is node 9.
6. Again click 'OK'.
7. The watch window should now look as shown in Figure 7-11.

Figure 7-11 Watch Window (2)

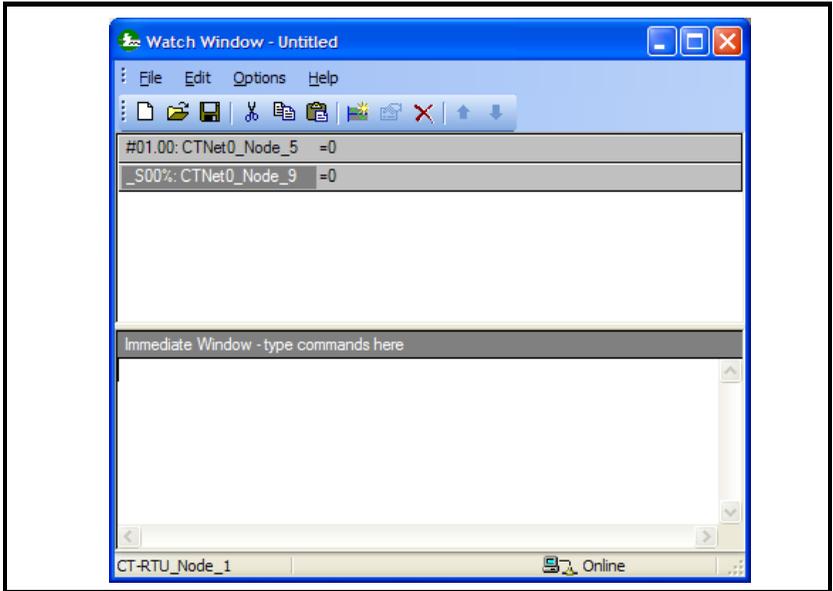

8. In the lower half of the watch window titled 'Immediate Window' type in the following, '#2.00 = 0x00010001', this is to enable the mask settings for the digital output terminal.
9. Once all of the previous steps are completed in order, join contact 1 of the KL1114 digital input terminal to contact 1 of the KL2408 digital output terminal, you will notice that parameter #1.00 of the watch window updates to a value of '1'.

8 Non-cyclic Data

This non-cyclic data is particularly useful for transmitting infrequent events around the network. The BK7200 CNet bus coupler cannot issue these commands as it does not run DPL programs, but it will respond to non-cyclic RNET, WRNET and CHECKNODE commands issued by other nodes on the network.

A typical example where non-cyclic data may be used is on a large network for infrequent data, such as a switch to engage a pinch roller when the line is ready to start. Response time to changing the switch is not critical, since it may take several seconds for the roller to engage. Once the roller is engaged, there is no need to transmit any information about the switch over the network until the switch changes state. This provides a large reduction in the network bandwidth used for this signal and increases the bandwidth available for other data signals.

NOTE Depending on the application it may be advisable to check the status of outputs that are controlled from time to time and to check the state of inputs more than once to allow for noise, etc.

Safety Information
Introduction
Electrical Installation
CNet Installation
Getting Started
Terminal Configuration
Cyclic Data
Non-cyclic Data
Diagnostics
KS2000 Configuration Tool
Menu 0
Glossary Of Terms
Index

9 Diagnostics

9.1 Beckhoff BK7200 bus coupler firmware version

There are two simple ways of which to check the currently installed version of firmware on the Beckhoff bus coupler, both through the use of SyPT:

1. In the SyPT watch window function view parameters #0.01 and #0.04, parameter #0.01 makes up part XXYY and parameter #0.04 makes up part ZZ, to make up the six digit firmware version in the form XXYYZZ.
e.g. If parameter #0.01 had a value of '104' and parameter #0.04 had a value of '11', then the firmware version would be '01.04.11'.
2. Again in SyPT, so long as the project is online, from the 'Project' menu choose 'Identify Node', along side the description of 'Core/system' will be the currently installed firmware version.

9.1.1 Updating the firmware

The BK7200 bus coupler's firmware can be updated through the use of either the Beckhoffs own 'KS2000' terminal configuration application or an equally effective DOS firmware updater which is available from your supplier or local drive centre. The correct cable must be used see Chapter 5.8 *Beckhoff coupler programming cable* on page 19 for more information.

1. To update the firmware through KS2000, the communications between the bus coupler and the PC must be set-up correctly. From the 'Online' drop-down list, select 'Coupler' and then 'Firmware Update'. A new page will open, on the right-hand side of the page is a button labelled 'Select', this is where you can choose the required firmware file, finally click 'Start' to update the firmware.
2. The BK7200 bus coupler can also be updated through 'Firmware Update V1.0' which is available from your supplier or local drive centre, execute the program, select the relevant COM port, enter the filename of the applicable firmware file and select 'Load'.

NOTE The firmware file must be present in the same folder that the 'firmware update V1.0.exe' file is being ran from.

The filename of the .hex firmware file, must be no longer than 12 characters long, this includes the '.hex' file extension.

- e.g. **V010400.hex** would be ok
mynewhexfile.hex would not

9.2 Diagnostic LEDs

The terminals attached to the bus coupler are checked when it is first switched on. A correct start-up procedure is indicated by the red LED "I/O ERR" going out. If this LED is flashing, then there is a fault somewhere along the K-bus. The position of the problem can be decoded by observing the flashing lights with the help of Table 9.1 *Diagnostic LEDs look-up table* .

Table 9.1 Diagnostic LEDs look-up table

LED				Significance	Remedy
HEALTHY	BUS ERR	COM RUN	INIT ERR		
off	off	off	off	Fieldbus configuring.	Wait while the fieldbus boots up.
off	off	off	flashing	A serious error occured during the initialisation of the fieldbus, this is most likely caused by memory or configuration errors.	Check: 1. Baud rate DIP switches are correctly set. 2. Ensure you have the latest firmware installed.
on	off	off	off	The configuration of the fieldbus has been successful, however no messages are being received at present.	Check: 1. If cyclic data is required ensure that there is a sync master on the CTNet network. 2. That messages are being directed to the coupler.
on	off	on	off	The BK7200 is currently receiving messages over the CTNet network	Nothing, everthing is currently working correctly.
on	on	off	on	The BK7200 is currently initiating a CTNet RECON.	Check: 1. The CTNet cable is plugged into the coupler. 2. That there is at least one other node operating on the network. 3. That the bus cable is intact.
on	on	off	off	CTNet RECON occurring	When a node is removed or inserted onto a network, then a RECON will occur.

The two green lights on the top right of the BK7200 bus coupler are there to indicate the voltage supply. The left sided LED shows the 24V supply of the bus coupler, while the right sided LED shows the supply (if any) to the power contacts.

9.3 Error codes and their meanings

The two I/O LEDs located at the bottom of the row of LEDs on the BK7200 bus coupler are used to display the operating mode of the bus terminals and the connections interlocking the bus terminals on the bus. When the green LED is lit up this means that the communications with the fieldbus system is working correctly, however if the red LED is lit up then there is a fault somewhere on the bus (see Table 9.1 *Diagnostic LEDs look-up table* for more information).

Table 9.2 Error code flashing sequences

Description	Error Reported
Rapid Flashing	Start of the Error Code
First slow sequence	Type of error
Second slow sequence	Location of error

Table 9.3 Error code look-up table

Error Code	Error Argument	Description	Remedy
Continuous blinking	0	EMC problems (check installation).	<ul style="list-style-type: none"> - Check power supply for over voltage or under voltage peaks. - Implement EMC measures. - If a terminal bus error is present, it can be localised by a restart of the coupler (by switching off and then on again).
1 pulse	0	EEPROM checksum error.	- Set to default factory settings using KS2000.
	1	In line code buffer overflow.	<ul style="list-style-type: none"> - Connect fewer terminals; too many entries in the database for the programmed configuration. - Software update required for the coupler.
2 pulses	0	Programmed configuration. Incorrect database entry.	- Check programmed configuration.
	n (n > 0)	(terminal n)	- Incorrect table entry / bus.
3 pulses	0	K-bus command error.	<ul style="list-style-type: none"> - No terminal connected; attach terminals. - One of the terminals is defective; halve the number of terminals attached and check whether the error is still present with the remaining terminals, repeat until the defective terminal is located.
4 pulses	0	K-bus data error.	- Check whether the end terminal 9010 is connected correctly.
	n	Break behind terminal n	- Check whether the n+1 terminal is correctly connected; replace if necessary.
5 pulses	n	K-bus error with register communication on terminal .	- Replace terminal.
6 pulses	n	Terminal not supported.	- If the terminal n is a complex terminal, and the control/status must be mapped, change data type so that the process data is a maximum of 3 bytes; else change data type to be 4 bytes. If this is not possible, terminal is not supported.

9.4 Location of error

The position of the last terminal before the error is represented by the number of flashes occurring, this does not include passive bus terminals such as power input terminals see Table 9.3 *Error code look-up table* on page 44.

Even when the fault has been cleared, the LED will not stop flashing and the operating mode will remain at stop until the bus coupler has been reset.

It is not advisable to plug or unplug terminals into the bus coupler without first ensuring that the power is off.

NOTE Some terminals may appear as two terminals on the bus, terminals with this behaviour are documented as so in its relevant data sheet.

9.5 Cannot establish CTNet connection

The following steps should be used when attempting to diagnose problems on CTNet networks:

1. Ensure that the correct type of cable is used. CTNet runs at very high data rates, and consequently requires high quality cable. Performance cannot be guaranteed if the specified Control Techniques CTNet cable is not used (support will not be provided where non-approved cable has been used).
2. Termination resistors **MUST** be fitted. Unpredictable network behaviour may result and the noise immunity of the network will also be severely reduced without proper line termination resistors ($82\Omega \pm 1\%$ for the current CTNet cable).
3. Update the firmware of the SM-Applications and the BK7200 CTNet bus coupler.
4. Check the node configuration settings on all nodes. Every node must have a unique node address, all node data rates must be identical and only one drive must be set to generate the synchronization message.
5. Ensure that the data rate selected is allowed for the length of network cable installed. If necessary, try reducing the network data rate at all nodes to establish communications. Repeaters may be required to extend the network length for a given data rate.
6. Refer to the CTNet manual for CTNet network maximum lengths. If more than 32 unit loads are connected to a single section of cable, network repeaters will be required. Network repeaters affect the maximum number of unit loads on each section of cable.

10 KS2000 Configuration Tool



Any changes made to KS2000 may have serious implications, ensure you understand the implications of any changes made.

10.1 KS2000 introduction


The KS2000 configuration software permits commissioning and parameterisation of the Beckhoff Fieldbus modules and of the Beckhoff Bus Terminals. The connection between the fieldbus components and the PC is established via the connection cable provided with KS2000. The KS2000 configuration software requires Windows NT, 2000 or XP operating systems.

The KS2000 software offers access to the process image of the fieldbus components. In this way it is possible to monitor the input and output images of the Bus Terminals. Access to individual signal channels is supported through a scope functionality.

10.2 KS2000 features

When KS2000 is first run, the screen in Figure 10-1 *Beckhoff KS2000 start-up screen* will be shown, it is advisable that you check the communication settings of the connection before you attempt to connect to the bus coupler.


Figure 10-1 Beckhoff KS2000 start-up screen

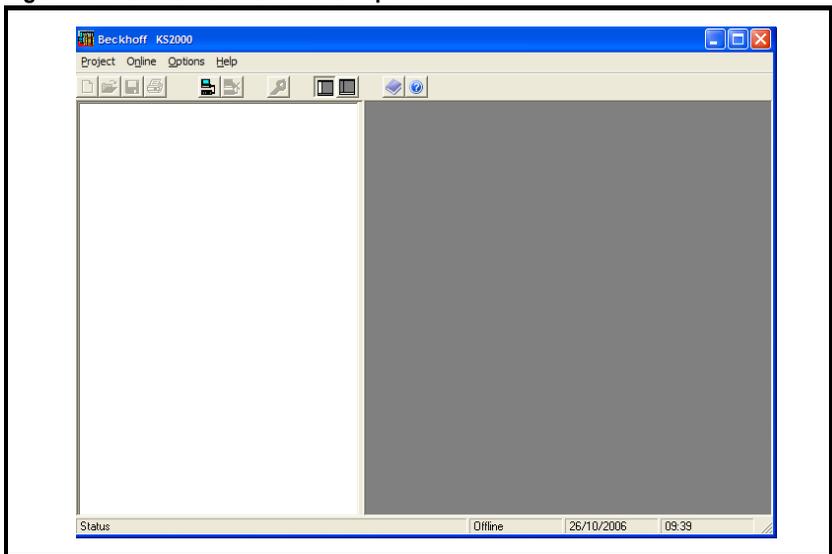

10.2.1 Changing the communication settings


1. From the 'Options' drop-down menu, select 'Communication channel'.
2. Next select 'Via COM'.
3. The window as shown in Figure 10-2 will be displayed.
4. Choose the COM port you are connecting to the PC.
5. Select the relevant baud rate.
6. Select whether your connection is either RS232 or RS485.
7. Finally to test that the connection to the bus coupler, click the 'Test...' button.

Figure 10-2 Communications set-up

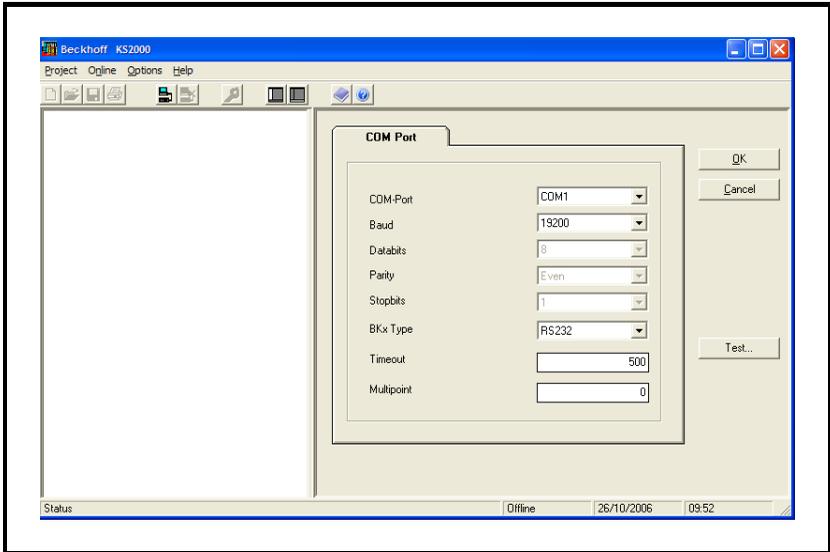

If the connection test was successful, the information box shown in Figure 10-3 will appear.


Figure 10-3 Communication with coupler successful

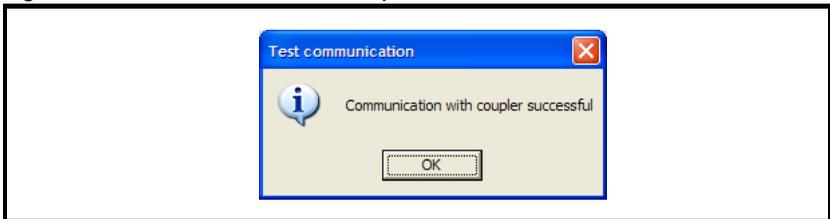

Once the settings are correctly configured click 'Ok'.


To go online, click the 'Online' button  from the KS2000 toolbar. You will be asked if you want to create new XML devices, click 'OK' to continue (as shown in Figure 10-4).

Figure 10-4 Create new XML devices

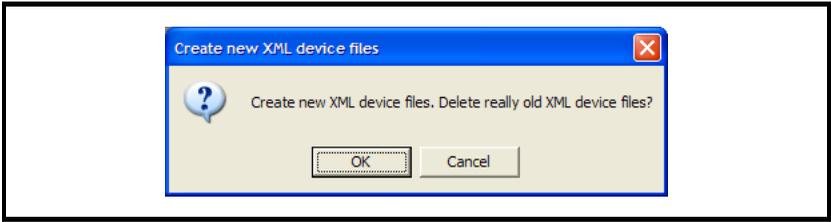

The layout of KS2000 is split up into 2 sections (as shown in Figure 10-5), the left hand side shows a list of the connected terminals, settings and configurations. The right side shows a graphical image of the current terminals connected to the BK7200 bus coupler.

Figure 10-5 Beckhoff KS2000 online - home screen

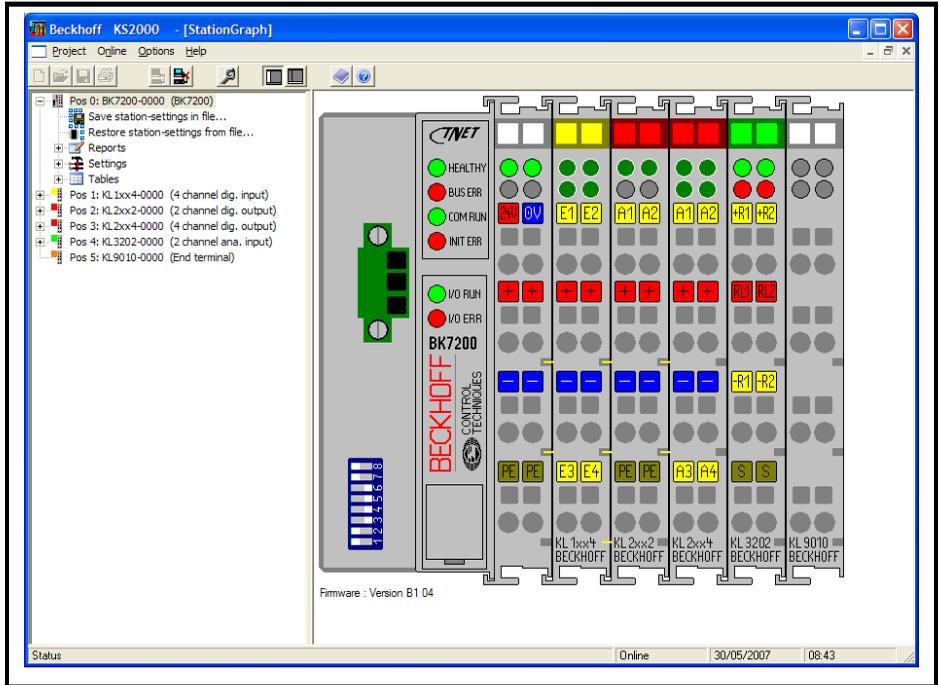

10.3 Purchasing KS2000

To purchase the KS2000 application software contact your supplier or local drive centre.

11.1 Menu 0 parameters

Table 11-1 Menu 0 parameters

Parameter	Description	Range	Default	Type
0.01	Software version XYY	0 to 9999	-	Read-Only
0.02	CTNet cycles per second	0 to 32767	0	Read-Only
0.03	K-bus cycles per second	0 to 32767	0	Read-Only
0.04	Software Version ZZ	0 to 99	-	Read-Only
0.05	Simple Watchdog	0 to 2000	0	Read-Write
0.06	2-byte PLC interface control	0 to 65535	0	Read-Write
0.07	2-byte PLC interface status	0 to 65535	0	Read-Only
0.08	Unsupported Terminal	0 to 64	0	Read-Only
0.09	Reserved			
0.10	CTNet number of messages	0 to 2147483647	0	Read-Only
0.11	CTNet cyclic overruns	0 to 65535	0	Read-Only
0.12	CTNet lost received messages	0 to 65535	0	Read-only
0.13	CTNet retries	0 to 65535	0	Read-Only
0.14	CTNet recons	0 to 65535	0	Read-Only
0.15	CTNet excessive Naks	0 to 65535	0	Read-Only
0.16	CTNet duplicate sync messages	0 to 65535	0	Read-Only
0.17	CTNet my recons	0 to 65535	0	Read-Only

Menu 0 can also be accessed through the use of menu 90, this allows the use of cyclic data to be mapped to any menu 0 parameter using SyPT.

11.1.1 #0.01 - Software version XXYY

Parameter #0.01 of the BK7200 bus coupler contains the first 4 digits of the 6 digit firmware version (more information can be found in section 9.1 *Beckhoff BK7200 bus coupler firmware version* on page 42).

11.1.2 #0.02 - CNet cycles per second

Parameter #0.02 of the BK7200 bus coupler shows the current rate of CNet cycles per second being received, the value of this parameter is dependant on the value in the CNet sync master.

11.1.3 #0.03 - K-bus cycles per second

Parameter #0.03 of the BK7200 bus coupler shows the current rate of K-bus cycles per second being received by the bus coupler, with firmware version 01.04.00 of the bus coupler the average speed of the K-bus on the BK7200 is roughly 1700 cycles per second, this is approximately 65% faster than the previous firmware version 01.03.00 (testing based on 3 digital terminals connected to the BK7200 bus coupler).

NOTE K-bus speed is subject to change and is for guidance purposes only.

11.1.4 #0.04 - Software version ZZ

Parameter #0.04 of the BK7200 bus coupler contains the last 2 digits of the 6 digit firmware version, (more information can be found in section 9.1 *Beckhoff BK7200 bus coupler firmware version* on page 42).

11.1.5 #0.05 - Simple watchdog

Parameter #0.05 of the BK7200 bus coupler is a read/write parameter, while it has a value of 0 the watchdog function is disabled, if it contains a value in the range of 1 - 2000, then the watchdog is enabled (more information can be found in Chapter 11.2 *Watchdog* on page 52).

11.1.6 #0.06 - 2-byte PLC interface Control

Parameter #0.06 of the BK7200 bus coupler is the control parameter for the 2-byte PLC interface control.

11.1.7 #0.07 - 2-byte PLC interface Status

Parameter #0.07 of the BK7200 bus coupler is the status parameter for the 2-byte PLC interface control.

11.1.8 #0.08 - Unsupported terminal

Parameter #0.08 of the BK7200 bus coupler will contain a value in the range of 0 - 64 and if applicable the value will represent the position of the first unsupported terminal on the K-bus.

11.1.9 #0.09 - Reserved

Parameter #0.09 of the BK7200 bus coupler is reserved for future use.

11.1.10#0.10 - CTNet no of messages

Parameter #0.10 of the BK7200 bus coupler counts up the added total of CTNet messages sent since the BK7200 bus coupler was last powered up. This parameter is read only.

11.1.11#0.11 - CTNet cyclic overruns

Parameter #0.11 of the BK7200 bus coupler counts up the total amount of cyclic overruns since the BK7200 was last powered up, this is a useful diagnostic parameter and gives a good indication of how healthy the network is. This parameter is read only.

11.1.12#0.12 - CTNet lost Rx messages

Parameter #0.12 of the BK7200 bus coupler counts up the number of lost Rx messages since the BK7200 was last powered up. See the CTNet user guide for more information on lost messages. This parameter is read only.

11.1.13#0.13 - CTNet retries

Parameter #0.13 of the BK7200 bus coupler counts up the total number of CTNet retries since the BK7200 was last powered up. This parameter is read only.

11.1.14#0.14 - CTNet recon

Parameter #0.14 of the BK7200 bus coupler is a counter which counts up the total number of reconfigurations since the BK7200 bus coupler was last powered up. See the CTNet user guide for more information on CTNet reconfigurations.

11.1.15#0.15 - CTNet excessive NAKs

Parameter #0.15 of the BK7200 bus coupler counts up the total number of excessive NAK messages since the BK7200 bus coupler was last powered up. See the CTNet user guide for more information on excessive NAKs. This parameter is read only.

11.1.16#0.16 - CTNet duplicate sync message

Parameter #0.16 of the BK7200 bus coupler counts up the total number of duplicate sync messages since the BK7200 was last powered up. See the CTNet user guide for more information on duplicate sync messages.

11.1.17#0.17 - CTNet my recons

Parameter #0.17 of the BK7200 bus coupler counts up the total number of CTNet reconfigurations since the BK7200 bus coupler was last powered up. See the CTNet user guide for more information on CTNet my network reconfigurations.

Safety Information
Introduction
Electrical Installation
CTNet Installation
Getting Started
Terminal Configuration
Cyclic Data
Non-cyclic Data
Diagnostics
KS2000 Configuration Tool
Menu 0
Glossary Of Terms
Index

11.2 Watchdog



When using the Watchdog function sure that the safe state for the machine is considered.

The Watchdog is a function which provides a safety net, that will automatically reset all Digital Outputs and Analog Outputs to 0 once a previously set timeout occurs.

In order for the watchdog function to be enabled, one node on the CTNet network must have sent a time-out value in the range of 1 through to 2000 to parameter #0.05 in the bus coupler, if necessary it is possible to write to this parameter through multiple nodes. When parameter #0.05 is written to, the time-out clock is reset to the time out value.

NOTE The range 1 - 2000 represents 1ms - 2000ms

Parameter #0.05 will decrease to 0 if this parameter is not written to before the value reaches 0 all digital and analog outputs will be reset to 0. For the procedure to work efficiently the watchdog time out value should always be set to a value which is 2.5x the maximum cyclic data rate.


To disable the watchdog function at any time, set parameter #0.05 to 0. Every time the bus coupler is turned on the watchdog value will need to be set again, as parameter #0.05 is reset to 0 during the initialization process of the bus coupler, subsequently the watchdog is disabled by default.

NOTE When using the Watchdog on a network precautions may need to be taken in the controlling node to prevent an intermittent network, causing output to change from the off safe state to the value set in the controlling cyclic data.

11.2.1 Watchdog example

Figure 11-1 shows the watchdog function in action. Remote nodes reset the timer (shown at points 1, 2, 3 and 4) to its original value of 2000 before parameter #0.05 reaches zero. At point 5, the connection to the CTNet network has been lost, therefore parameter #0.05 does not get updated again. When this parameter has reached zero, all analog and digital outputs are reset to 0 or OFF respectively

Figure 11-1 Example Watchdog set-up

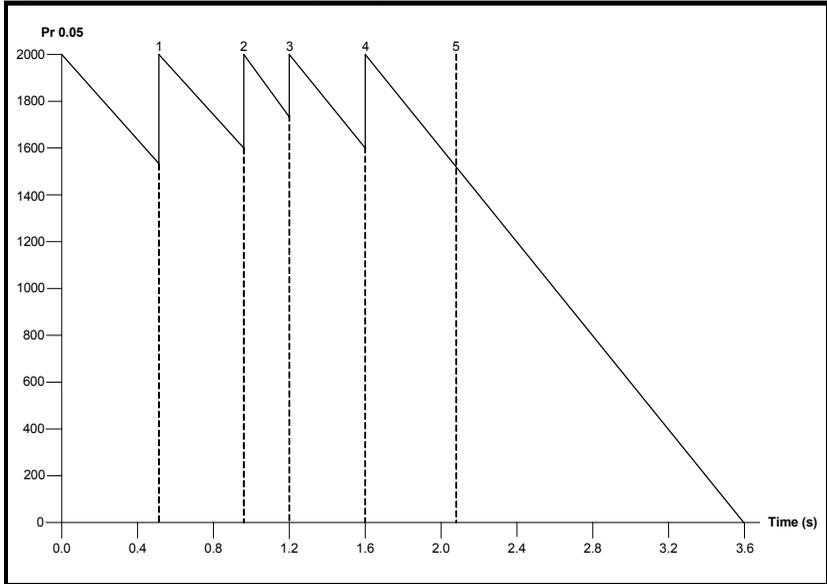

NOTE It is important to be aware that the Watchdog function should only be used in suitable scenarios, it will not always be advisable to enable the watchdog function as in some circumstances it could be dangerous to reset all outputs to '0' (e.g. an anchor on a ship).

NOTE It is the responsibility of the system integrator to ensure that the complete system is safe under all circumstances.

11.3 Unsupported terminal

To find out whether or not there is one or more unsupported terminals connected to the bus coupler, check parameter #0.08, if the value is any value other than 0 then the value present indicates the position of the first unsupported terminal. See section 9.2 *Diagnostic LEDs* on page 43 and section 9.3 *Error codes and their meanings* on page 43 for more details.

11.4 2-byte PLC interface

The 2-byte PLC interface is provided to enable register communication with the internal register structure of complex terminals and the coupler.

Table 11-2 2-byte PLC interface

Byte	Bit address		Values
Output Byte 0	0.0	Toggle bit	0/1
	0.1	---	
	0.2	Toggle bit Reset Request	0/1
	0.3 - 0.7	Function Code	
Output Byte 1	Data byte is Write Request		0 - 255
Input Byte 0	0.0	Toggle bit	0/1
	0.1	---	
	0.2	Reset Acknowledge bit	0/1
	0.3	Error bit (Routing / Write protect)	0/1
Input Byte 1	Data byte is Read Request		

Table 11-3 2-byte PLC interface function codes

Function codes	0.7	0.6	0.5	0.4	0.3
Send Terminal Number	1	0	0	0	0
Send Table Number	1	0	0	0	1
Send Register Number	1	0	0	1	0
Write Low Byte	1	0	0	1	1
Write High Byte	1	0	1	0	0
Write High Byte and Increment Register Address	1	0	1	0	1
Read Low Byte	0	0	0	1	1
Read High Byte	0	0	1	0	0
Read High Byte and Increment Register Address	0	0	1	0	1

NOTE

Menu 0 / Menu 90 is still available for access when the coupler has discovered an unsupported terminal on the bus coupler's line. This allows diagnostic access rights and therefore access to the 2-byte PLC interface, which may be used to rectify the terminal by changing its register values e.g. the terminal has a data type too large for CTNet's 32-bit parameters.

12 Glossary Of Terms

Address: This is the unique network identification given to a networked device to allow communication on a network. When a device sends or receives data the address is used to determine the source and the destination of the message.

Bit: A binary digit, this may have the value 1 or 0.

Byte: A collection of 8 binary digits that collectively store a value. This may be signed or unsigned.

Control word: A collection of binary digits that are used to control the drive. Features typically include directional controls, run controls and other similar functions.

Cyclic data: This consists of values that are sent at regular or cyclic intervals across the network. A typical use of cyclic data would be the transmission of a speed reference or a control word.

Data format: Determines the quantity and function of the data sent and received across the network.

Data rate: Determines the communication speed of the network, the higher the value the more data can be sent across the network in the same period.

Device: A piece of equipment connected to a network, this may be any type of equipment including repeaters, hubs, masters or slaves.

DIP switch: A collection of tiny switches.

K-bus: The serial K-bus acts as a buffer for information transfer between the BK7200 CTNet bus coupler and CTNet itself. Used on the BK7200 to communicate to sub modules.

Mapping: The process of linking Beckhoff terminal values to values within the drive.

Mask: A filter that selectively includes or excludes certain values. For example when defining a database field, it is possible to assign a mask that indicates what sort of value the field should hold. Values that do not conform to the mask cannot be entered.

Node: A device on the network. This may be either a device such as a drive or part of the network such as a repeater.

Non-cyclic data: Data that is requested or sent by the master as required. This is not sent on a regular basis and generally allows access to any parameter. This is useful for occasional changes or configuration purposes.

Status word: A value that denotes the status of the drive. Each bit within the word will have a specific meaning.

Safety Information
Introduction
Electrical Installation
CTNet Installation
Getting Started
Terminal Configuration
Cyclic Data
Non-cyclic Data
Diagnostics
KS2000 Configuration Tool
Menu 0
Glossary Of Terms
Index

Terminal: Terminals are individual Input/Output modules which easily slot onto the BK7200 to add additional functionality.

Termination: This is used at both ends of a network segment to prevent reflections and reduce noise.

Watchdog: A method used to determine if a communication system is healthy. A typical watchdog scheme uses a handshaking system to check both the master and slave are participating in communications.

Index

Symbols

+24V DC power supply 12

Numerics

3-way CTNet connector 13

A

Analog input terminals 25

Analog output terminals 27

B

BK7200 bus coupler 9

BK7200 bus coupler programming cable 19

C

Cautions 6

Configuration interface 13

CTNet cable 15

CTNet cable part numbers 15

CTNet connection lost 19

CTNet segment specifications 16

CTNet terminal block 15

Current consumption 12

Cyclic data synchronisation message 19

D

Data rate 18

Diagnostics 42

Digital input terminals 21

Digital output terminals 23

DIP switches 18

E

Electrical installation 12

Electrically isolated 13

Example Beckhoff configuration 1 29

Example Beckhoff configuration 2 30

G

General information 2

Getting started 17

Glossary of terms 55

I

ID code 20

Introduction 9

K

K-bus 13

KS2000 configuration software 46

L	
Large terminals	28
M	
Maximum network length	16
N	
Network	19
Node address	17
Noise immunity	15
Nominal supply current	12
Notes	6
O	
Overloading network nodes	33
P	
Pin out connections	14
R	
Ring structure	13
RS232 interface	13
S	
Special function input terminals	28
Special function output terminals	28
Spring terminals	12
Supported analog input terminals	25
Supported analog output terminals	27
Supported digital input terminals	22
Supported digital output terminals	24
Synchronization	19
T	
Terminal parameter allocations	21
Terminating resistors	15
W	
Watchdog	52



0485-0019-04